SAMSUNG

AH68-02060K

MAX-DA66
MAX-DA67

DVD MINI COMPONENT SYSTEM WITH USB HOST

DVD/CD/MP3-CD/CD-R/RW PLAYBACK

user manual

imagine the possibilities

Thank you for purchasing a Samsung product.
To receive a more complete service,
please register your product at
www.samsung.com/global/register

SAMSUNG

Downloaded From Disc-Player.com Samsung Manuals

Safety Warnings

CAUTION
RISK OF ELECTRIC SHOCK.
DO NOT OPEN

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE REAR COVER (or BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

CLASS 1 LASER PRODUCT
KLASSE 1 LASER PRODUKT
LUOKAN 1 LASER LAITE
KLASS 1 LASER APPARAT
PRODUCTO LASER CLASE 1

This symbol indicates “dangerous voltage” inside the product that presents a risk of electric shock or personal injury.

This symbol indicates important instructions accompanying the product.

CLASS 1 LASER PRODUCT

This Compact Disc player is classified as a CLASS 1 LASER product.

Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

CAUTION : INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED, AVOID EXPOSURE TO BEAM.

WARNING : To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

CAUTION : TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

- This apparatus shall always be connected to a AC outlet with a protective grounding connection.
- To disconnect the apparatus from the mains, the plug must be pulled out from the mains socket, therefore the mains plug shall be readily operable.

CAUTION

- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- The Mains plug is used as a disconnect device and shall stay readily operable at any time.

[Saudi Arabian Standards Organisation only]
THIS APPLIANCE IS FITTED WITH 220V SASO APPROVED PLUG.THE CUSTOMER IS ENTITLED TO A FREE SASO APPROVED 127V PLUG FROM THE LOCAL DEALER.

Downloaded From Disc-Player.com Samsung Manuals

Precautions

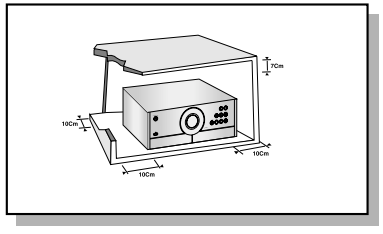

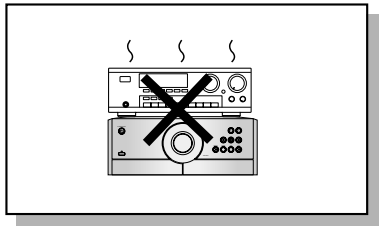

Ensure that the AC power supply in your house complies with the identification sticker located on the back of your player. Install your player horizontally, on a suitable base (furniture), with enough space around it for ventilation (3~4inches). Make sure the ventilation slots are not covered. Do not stack anything on top of the player. Do not place the player on amplifiers or other equipment which may become hot. Before moving the player, ensure the disc insert hole is empty. This player is designed for continuous use. Switching off the DVD player to the stand-by mode does not disconnect the electrical supply. In order to disconnect the player completely from the power supply, remove the main plug from the wall outlet, especially when left unused for a long period of time.

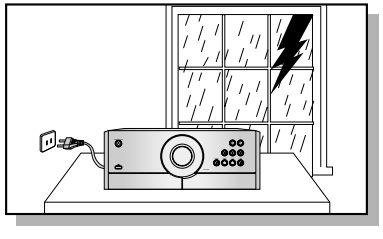

During thunderstorms, disconnect AC main plug from the wall outlet.
Voltage peaks due to lightning could damage the unit.

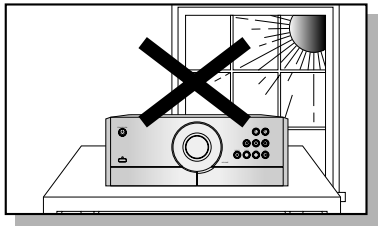

Do not expose the unit to direct sunlight or other heat sources.
This could lead to overheating and malfunction of the unit.

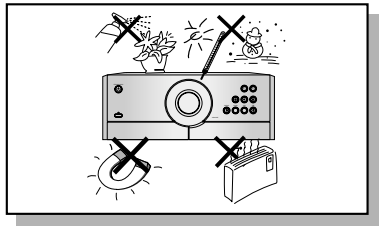

Protect the player from moisture(i.e. vases) , and excess heat(e.g.fireplace) or equipment creating strong magnetic or electric fields (i.e.speakers...). Disconnect the power cable from the AC supply if the player malfunctions. Your player is not intended for industrial use.
Use of this product is for personal use only.
Condensation may occur if your player or disc have been stored in cold temperatures.
If transporting the player during the winter, wait approximately 2 hours until the unit has reached room temperature before using.

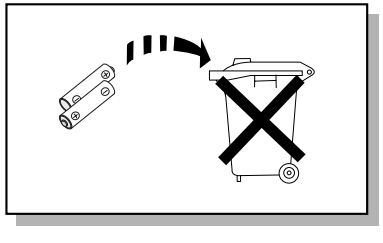

The battery used with this product contain chemicals that are harmful to the environment.
Do not dispose of batteries in the general household trash.

Fast Playback

Downloaded From Disc Player.com Samsung Manuals

Downloaded From Disc Player.com Samsung Manuals

Notes on Discs

DVD (Digital Versatile Disc) offers fantastic audio and video, thanks to Dolby Digital surround sound and MPEG-2 video compression technology. Now you can enjoy these realistic effects in the home, as if you were in a movie theater or concert hall.

DVD players and the discs are coded by region. These regional codes must match in order for the disc to play. If the codes do not match, the disc will not play.
The Region Number for this player is given on the rear panel of the player.
(Your DVD player will only play DVDs that are labeled with identical region codes.)

Playable Discs

Disc Type	Mark (Logo)	Recorded Signals	Disc Size	Max. Playing Time
DVD-VIDEO	DVD VIDEO	Audio + Video	12cm	Approx. 240 min. (single-sided)
				Approx. 480 min. (double-sided)
			8cm	Approx. 80 min. (single-sided)
				Approx. 160 min. (double-sided)
AUDIO-CD	COMPACT disc DIGITAL AUDIO	Audio	12cm	74 min.
			8cm	20 min.
DivX	DivX	Audio + Video	12cm	74 min.
			8cm	20 min.

Do not use the following types of disc!

- LD, CD-G, CD-I, CD-ROM and DVD-ROM discs cannot be played on this player.
  If such discs are played, a **<WRONG DISC FORMAT>** message appears on the TV screen.
- DVD discs purchased abroad may not play on this player.
  If such discs are played, a **<CAN'T PLAY THIS DISC PLEASE, CHECK REGION CODE>** message appears on the TV screen.

Copy Protection

- **Many DVD discs are encoded with copy protection. Because of this, you should only connect your DVD player directly to your TV, not to a VCR. Connecting to a VCR results in a distorted picture from copy-protected DVD discs.**
- This product incorporates copyright protection technology that is protected by methods claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Downloaded From Disc-Player.com Samsung Manuals

Disc Recording Format

This product does not support Secure (DRM) Media files.

CD-R Discs

- Some CD-R discs may not be playable depending on the disc recording device (CD-Recorder or PC) and the condition of the disc.
- Use a 650MB/74 minute CD-R disc.
  Do not use CD-R discs over 700MB/80 minute as they may not be playback.
- Some CD-RW (Rewritable) media, may not be playable.
- Only CD-Rs that are properly "closed" can be fully played. If the session is closed but the disc is left open, you may not be able to fully play the disc.

CD-R MP3 Discs

- Only CD-R discs with MP3 files in ISO 9660 or Joliet format can be played.
- MP3 file names should be 8 characters or less in length and contain no blank spaces or special characters (. / = +).
- Use discs recorded with a compression/decompression data rate greater than 128Kbps.
- Only files with the "mp3" and extensions can be played.
- Only a consecutively written multisession disc can be played. If there is a blank segment in the Multisession disc, the disc can be played only up to the blank segment.
- If the disc is not closed, it will take longer to begin playback and not all of the recorded files may be played.
- For files encoded in Variable Bit Rate (VBR) format, i.e. files encoded in both low bit rate and high bit rate (e.g., 32Kbps ~ 320Kbps), the sound may skip during playback.
- A maximum of 500 tracks can be played per CD.
- A maximum of 300 folders can be played per CD.

CD-R JPEG Discs

- Only files with the "jpg" extensions can be played.
- If the disc is not closed, it will take longer to start playing and not all of the recorded files may be played.
- Only CD-R discs with JPEG files in ISO 9660 or Joliet format can be played.
- JPEG file names should be 8 characters or less in length and contain no blank spaces or special characters (. / = +).
- Only a consecutively written multisession disc can be played. If there is a blank segment in the multisession disc, the disc can be played only up to the blank segment.
- A maximum of 9,999 images can be stored on a single CD.
- When playing a Kodak/Fuji Picture CD, only the JPEG files in the picture folder can be played.
- Picture discs other than Kodak/Fuji Picture CDs may take longer to start playing or may not play at all.

DVD±R/RW, CD-R/RW DivX Discs

- Since this product only provides encoding formats authorized by DivX Networks, Inc., a DivX file created by the user might not play.
- Software updates for incompatible formats are not supported.
  (Example : QPEL, GMC, resolution higher than 800 x 600 pixels, etc.)
- Sections with a high frame rate might not be played while playing a DivX file.
- For more information about the formats authorized by DivX Networks, Inc., please visit "www.divxnetworks.net".

Description

—Front Panel—

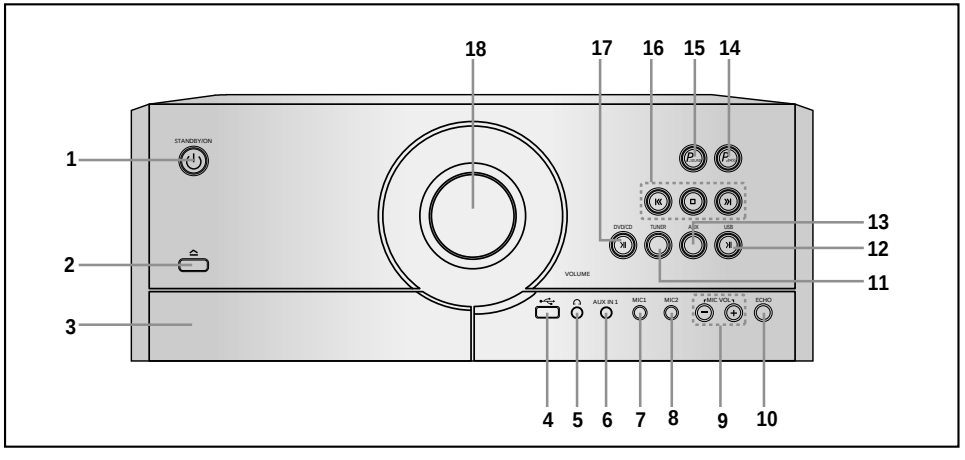

1. STANDBY/ON BUTTON
2. OPEN/CLOSE BUTTON
3. COMPACT DISC COMPARTMENT
4. USB JACK
5. HEADPHONE JACK
6. AUX IN 1
7. MIC 1
8. MIC 2
9. MIC VOLUME BUTTON
10. ECHO BUTTON
11. TUNER FUNCTION
12. USB FUNCTION
13. AUX FUNCTION
14. POWER BASS BUTTON
15. POWER SOUND BUTTON
16. SEARCH FUNCTION BUTTONS, TUNING MODE OR STOP BUTTON
17. DVD/CD FUNCTION
18. VOLUME CONTROL

—Rear Panel—

MAX-DA66

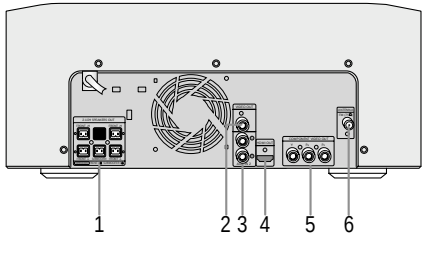

1. **2.1 Channel Speaker Output Terminals**
2. **Video Output Connector**
   Connect the TV's video input jacks (VIDEO IN) to the VIDEO OUT connector.
3. **AUX IN 2 Connector**
4. **HDMI OUT Connector**
5. **Component Video Output Connectors**
   Connect a TV with component vide input jacks to these jacks.
6. **FM Antenna Connector**

MAX-DA67

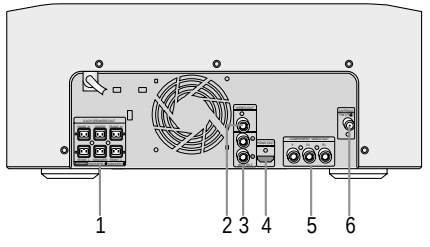

1. **3.1 Channel Speaker Output Terminals**
2. **Video Output Connector**
   Connect the TV's video input jacks (VIDEO IN) to the VIDEO OUT connector.
3. **AUX IN 2 Connector**
4. **HDMI OUT Connector**
5. **Component Video Output Connectors**
   Connect a TV with component vide input jacks to these jacks.
6. **FM Antenna Connector**

Note **The picture of Rear panel is based on MODEL:MAX-DA66**
MAX-DA66: 2.1 Channel Speaker Output
MAX-DA67: 3.1 Channel Speaker Output

Accessories

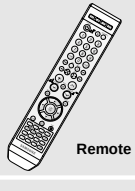
Remote Control

Video Cable

HDMI Cable(option)


FM Antenna

User's Manual

Downloaded From Disc-Player.com Samsung Manuals

Description

—Remote Control—

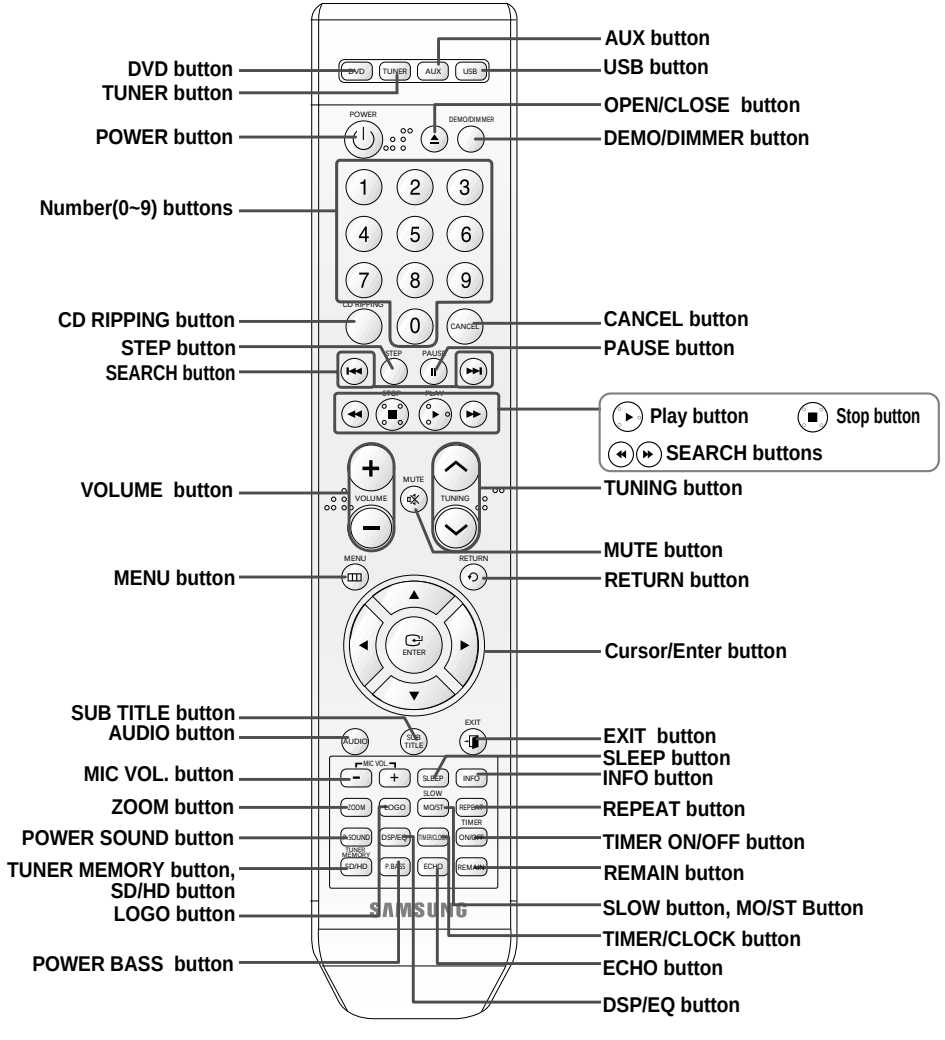

Insert Remote Batteries

1 Remove the battery cover in the direction of the arrow.

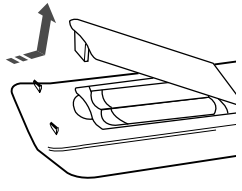

2 Insert two 1.5V AAA batteries, paying attention to the correct polarities (+ and –).

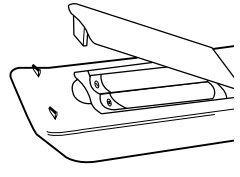

3 Replace the battery cover.

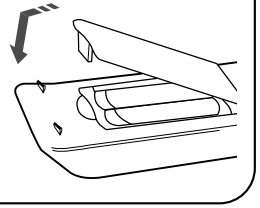

Caution **Follow these precautions to avoid leaking or cracking cells:**

- Place batteries in the remote control so they match the polarity:(+) to (+)and (–)to (–).
- Use the correct type of batteries.Batteries that look similar may differ in voltage.
- Always replace both batteries at the same time.
- Do not expose batteries to heat or flame.

Range of Operation of the Remote Control

The remote control can be used up to approximately 23 feet/7 meters in a straight line. It can also be operated at a horizontal angle of up to 30° from the remote control sensor.

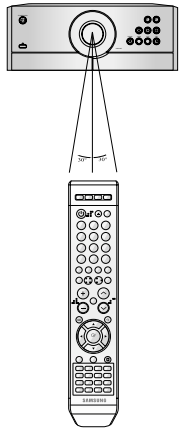

Downloaded From Disc-Player.com Samsung Manuals

Fast Playback

Downloaded From Disc Player.com Samsung Manuals

Downloaded From Disc Player.com Samsung Manuals

Connecting the Video Out to your TV

Choose one of the four methods for connecting to a TV.

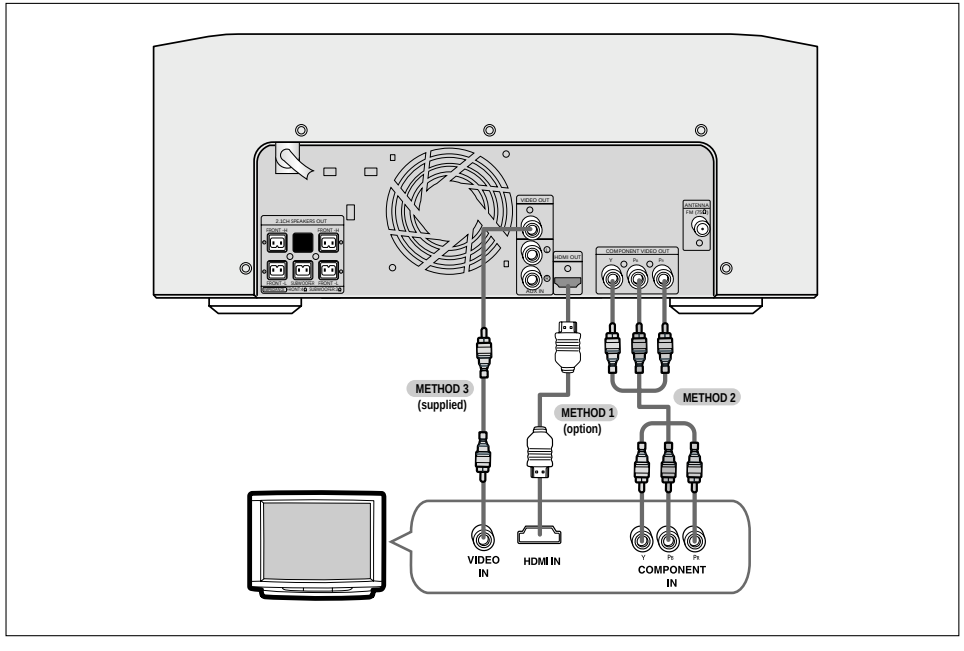

METHOD 1 : HDMI ..... (Best Quality)

Connect the HDMI cable from the HDMI OUT jack on the back of the DVD Player to the HDMI IN jack on your TV.

METHOD 2 : Component Video ..... (Better Quality)

If your television is equipped with Component Video inputs, connect a Component video cable(not supplied) from the Component Video Output (Pr, Pb and Y) jacks on the back of the DVD Player to the Component Video Input jacks on your TV.

METHOD 3 : Composite Video ..... (Good Quality)

Connect the supplied Video cable from the VIDEO OUT jack on the back of the DVD Player to the VIDEO IN jack on your TV.

• This product operates in Interlace scan mode (576i) for component output.

HDMI Function

Resolution Selection

This function allows the user to select the screen resolution for HDMI output.

In Stop mode, press and hold the **SD/HD** (Standard Definition/High Definition) button on the remote control.

- Resolutions available for the HDMI output are 480p, 720p, 1080i.
- SD(Standard Definition) resolution is 480p and HD(High Definition) resolution is 720p/1080i.

Why use HDMI (High Definition Multimedia Interface)?

This device transmits a DVD video signal digitally without the process of converting to analog. You will get sharper digital pictures when using an HDMI connection.

• If the TV does not support the configured resolution, you will not be able to see the picture properly.
• **When an HDMI cable is connected, composite and component video signals are not output.**
• See your TV owner's manual for more information on how to select the TV's Video Input source.

Setting the HDMI Audio

The audio signals transmitted over the HDMI Cable can be toggled ON/OFF.

1 In Stop mode, press the **MENU** button.

2 Press the Cursor ▼ button to move to **<Audio>** and then press the **ENTER** button.

3 Press the Cursor ▼ button to move to **<HDMI AUDIO>** and then press the **ENTER** button.

4 Press the Cursor ▲, ▼ button to select <ON> or <OFF> and then press the **ENTER** button.

• ON : Both video and audio signals are transmitted over the HDMI connection cable, and audio is output through your TV speakers only.
• OFF : Video is transmitted over the HDMI connection cable only, and audio is output through the home theater speakers only.

• The default setting of this function is HDMI AUDIO OFF.
• HDMI AUDIO is automatically down-mixed to 2ch for TV speakers.
• ECHO/P.SOUND/EQ/DSP function is not available when HDMI AUDIO is ON.
• MIC output is not available while HDMI AUDIO ON.

➢ Press the **RETURN** button to return to the previous level.
➢ Press the **EXIT** button to exit the setup screen.

Downloaded From Disc-Player.com Samsung Manuals

Fast Playback

Downloaded From Disc Player.com Samsung Manuals

Downloaded From Disc_Player.com Samsung Manuals

Fast Playback

Downloaded From Disc Player.com Samsung Manuals

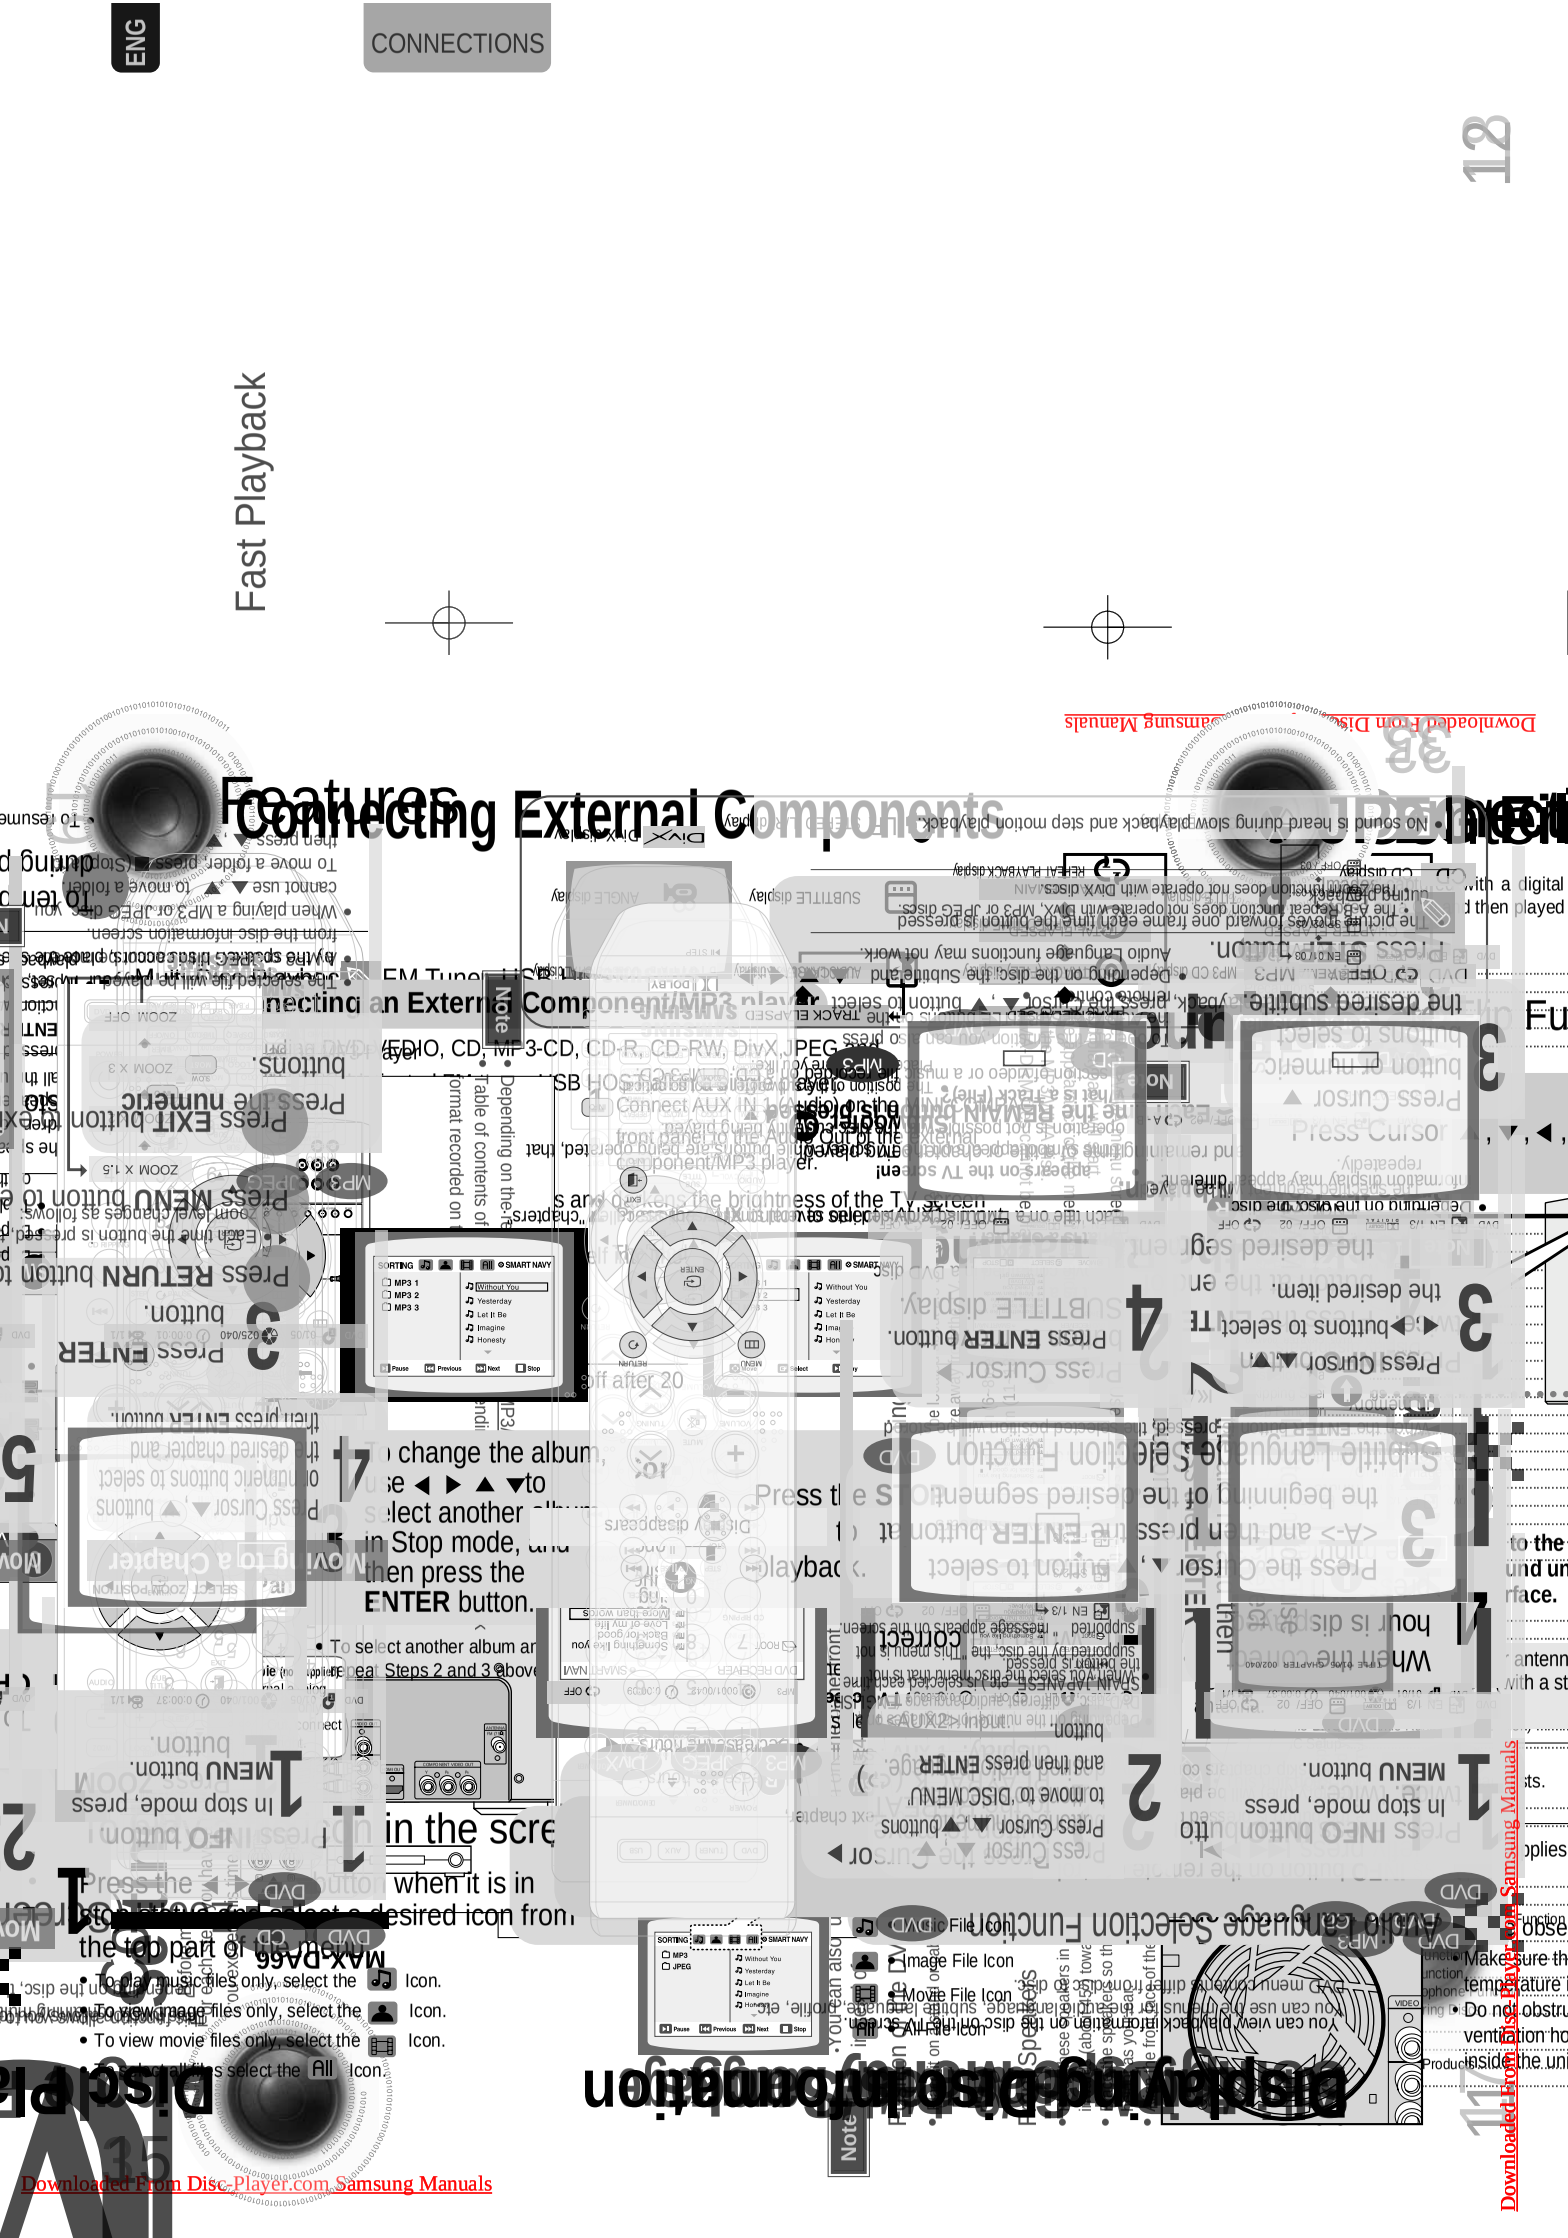

Downloaded From Disc Player.com Samsung Manuals

Fast Playback

Downloaded From Disc Player.com Samsung Manuals

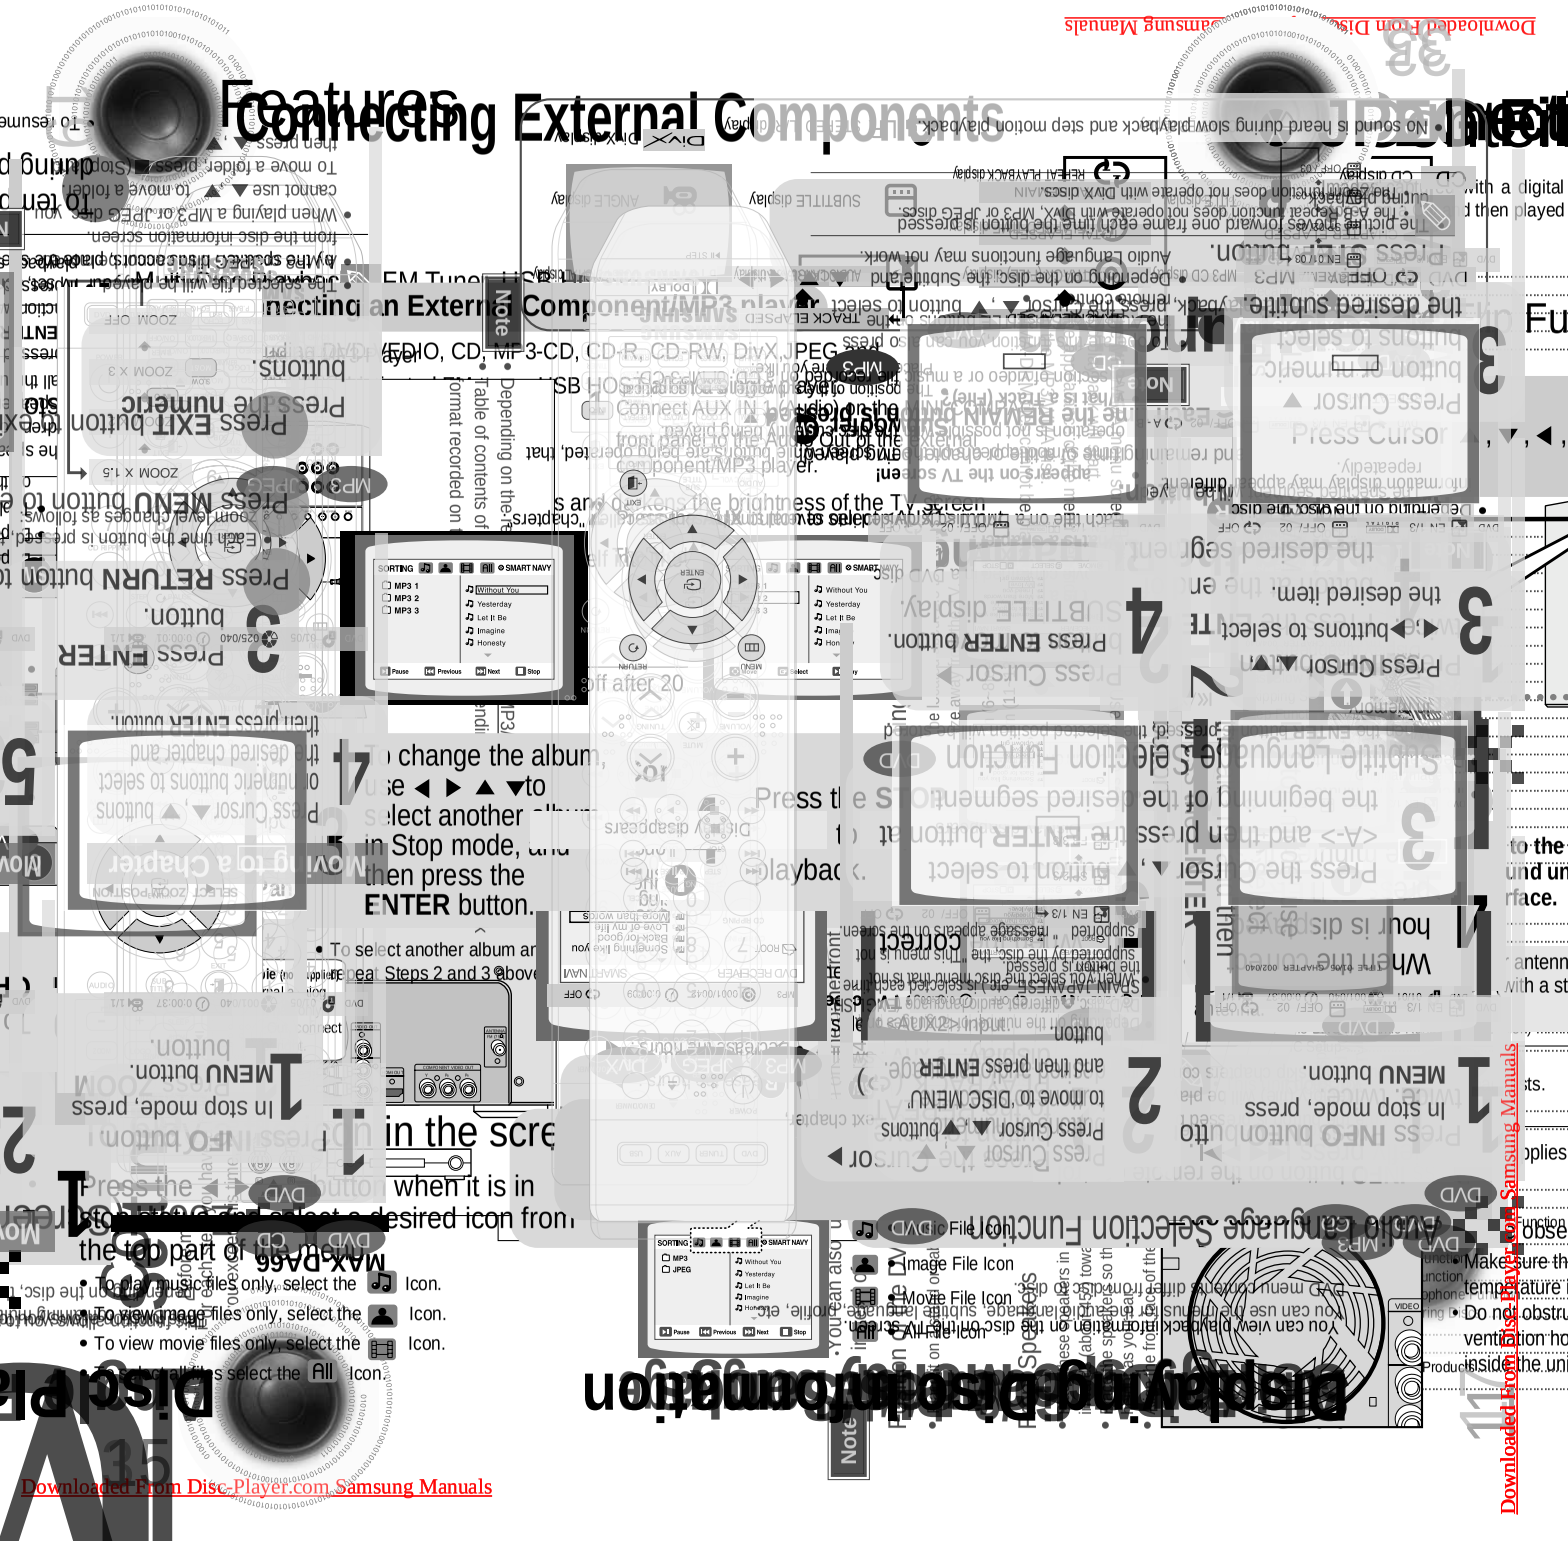

Downloaded From Disc Player.com Samsung Manuals

Downloaded From Disc-Player.com Samsung Manuals

Playing Media Files using the USB feature

You can connect and play files from external USB storage devices such as MP3 players, USB flash memory, etc. using the player's USB function.

Note

- For MP3 files from the USB storage device, you can play them in random order.

Skip Forward/Back

During playback, press the ◀◀ ▶▶ button.

- When there is more than a file, when you press the ▶▶ button, the next file is selected.
- When there is more than a file, when you press the ◀◀ button, the previous file is selected.

Fast playback

To play back the disc at a faster speed, press ◀◀ or ▶▶ button during playback.

- Each time you press either button, the playback speed will change as follows:
  2x 4x 8x 32x Normal.

Compatible Devices

1. USB devices that support USB Mass Storage v1.0.
   (USB devices that operate as a removable disk in Windows (2000 or later) without additional driver installation.)
2. MP3 Player: HDD and flash type MP3 player.
3. Digital camera: PTP protocol is not supported.
   - Devices which require additional program installation when you have connected it to a computer, are not supported.
4. USB HDD and USB Flash Drive: Devices that support USB2.0 or USB1.1.
   - You may experience a difference in playback quality when you connect a USB1.1 device.
   - For a USB HDD, make sure to connect an auxiliary power cord to the USB HDD for proper operation.
5. USB card Reader: One slot USB card reader and Multi slot USB card reader
   - Depending on the manufacturer. the USB card reader may not be supported.
   - If you install multiple memory devices into a multi card reader, you may experience problems.

Supported Formats

File name	File extension	Bit rate	Version	Pixel	Sampling Frequency
Still Picture	.JPG .JPEG	–	–	640*480	–
Music	.MP3	80~384kbps	–	–	44.1kHz
	.WMA	56~128kbps	V8	–	44.1kHz
Movie	.WMV	4Mbps	V1,V2,V3,V7 (V9 is not supported)	720*480	44.1KHz~48KHz
	DivX	.AVI,.ASF	4Mbps	DivX3.11~DivX5.1,XviD	800*600	44.1KHz~48KHz

- A device using NTFS file system is not supported.(Only FAT file system is supported.)

The USB host function of this product does not support all USB devices.
For the information on the supported devices,please see the page 60.

OPERATION

Downloaded From Disc-Player.com Samsung Manuals

Downloaded From Disc-Player.com Samsung Manuals

Skip Forward/Back

During playback, press the ◀◀ ▶▶ button.

- When there is more than a file, when you press the ▶▶ button, the next file is selected.
- When there is more than a file, when you press the ◀◀ button, the previous file is selected.

Fast playback

To play back the disc at a faster speed, press ◀◀ or ▶▶ button during playback.

- Each time you press either button, the playback speed will change as follows:
  2x → 4x → 8x → 32x → Normal.

Compatible Devices

1. USB devices that support USB Mass Storage v1.0.
(USB devices that operate as a removable disk in Windows (2000 or later) without additional driver installation.)
2. MP3 Player: HDD and flash type MP3 player.
3. Digital camera: PTP protocol is not supported.
   - Devices which require additional program installation when you have connected it to a computer, are not supported.
4. USB HDD and USB Flash Drive: Devices that support USB2.0 or USB1.1.
   - You may experience a difference in playback quality when you connect a USB1.1 device.
   - For a USB HDD, make sure to connect an auxiliary power cord to the USB HDD for proper operation.
5. USB card Reader: One slot USB card reader and Multi slot USB card reader
   - Depending on the manufacturer. the USB card reader may not be supported.
   - If you install multiple memory devices into a multi card reader, you may experience problems.

- **Supported Formats**

	File name	File extension	Bit rate	Version	Pixel	Sampling Frequency
Still Picture	JPEG	.JPG .JPEG	–	–	640*480	–
Music	MP3	.MP3	80~384kbps	–	–	44.1kHz
	WMA	.WMA	56~128kbps	V8	–	44.1kHz
Movie	WMV	.WMV	4Mbps	V1,V2,V3,V7 (V9 is not supported)	720*480	44.1KHz~48KHz
	DivX	.AVI,.ASF	4Mbps	DivX3.11~DivX5.1,XviD	800*600	44.1KHz~48KHz

- A device using NTFS file system is not supported.(Only FAT file system is supported.)

The USB host function of this product does not support all USB devices.
For the information on the supported devices,please see the page 60.

Playing Media Files using the USB feature

You can connect and play files from external USB storage devices such as MP3 players, USB flash memory, etc. using the player's USB function.

- Video files (DivX, WMV, MPEG, etc.) are supported.
- To prevent the loss of data saved in the USB device, switch it to another mode before disconnecting the device.
- "USB" appears on the display screen and then disappears.
- USB SORTING: Selects the desired file type.
- TV screen and the saved screen may appear for a few seconds while the system is reading the USB device.

1 Connecting a USB device

Connect the USB cable.

2 Selecting the USB function

Press the USB button on the remote control to select the USB mode.

Press the USB button on the main unit of the player repeatedly to select the USB mode.

3 Selecting a file

Press the ◀ or ▶ button to select the desired file.

Press the ENTER button to play the selected file.

To stop playback, press the STOP (■) button.

To pause playback, press the PAUSE (❚❚) button.

To play back the disc at a faster speed, press ◀◀ or ▶▶ button during playback.

- Each time you press either button, the playback speed will change as follows:
  2x → 4x → 8x → 32x → Normal.

To play a file in the USB menu screen,

During playback, press the ◀◀ or ▶▶ button, if there are over 2 files in the disk.

- Go to the previous file whenever you press ◀◀ button, if there are over 2 files in the disk.
- Go to the next file whenever you press ▶▶ button, if there are over 2 files in the disk.

Skip Forward/Back

During playback, press the ◀◀ ▶▶ button.

- When there is more than a file, when you press the ▶▶ button, the next file is selected.
- When there is more than a file, when you press the ◀◀ button, the previous file is selected.

Fast playback

To play back the disc at a faster speed, press ◀◀ or ▶▶ button during playback.

- Each time you press either button, the playback speed will change as follows:
  2x → 4x → 8x → 32x → Normal.

Repeat Playback

Press the REPEAT button.

- Each time the button is pressed during playback, the repeat playback mode changes as follows:

Repeat Playback Options

- **CHAPTER**: Repeatedly plays the selected chapter.
- **TITLE**: Repeatedly plays the selected title.
- **RANDOM**: Plays tracks in random order. (A track that has already been played may be played again.)
- **TRACK**: Repeatedly plays the selected track.
- **DIR**: Repeatedly plays all tracks in the selected folder.
- **DISC**: Repeatedly plays all tracks in the disc.
- **OFF**: Cancels Repeat Playback.

5 Minute Skip function

Press the ◀ or ▶ button during playback, press the ◀◀ or ▶▶ button.

Audio Display

Press the AUDIO button.

- Each time you press the button, your selection changes as follows:
  - DivX: Audio language
  - MP3: Audio channel (Stereo, Left, Right)
  - CD: Audio channel (Stereo, Left, Right)

Subtitle Display

- If the disc has only one subtitle file, it will be selected automatically.
- Each time you press the button, your selection changes as follows:
  - DivX: Subtitle language
  - MP3: Subtitle language
  - CD: Subtitle language

Supported Files

Icon	Type	Extension	Compatible Format
	All	*	All files
	Movie	DivX	DivX3.11, DivX4, DivX5, DivX6
	Movie	AVI	DivX3.11, DivX4, DivX5, DivX6
	Movie	ASF	WMV V1/V2/V3/V7/V8
	Movie	WMV	WMV V1/V2/V3/V7/V8
	Music	MP3	CBR : 80kbps~384kbps
	Music	AC3	CBR : 128kbps~384kbps
	Music	WMA	CBR : 56kbps~128kbps
	Image	JPEG	Baseline, Progressive

- Image File Icon
- Music File Icon

DivX Supported

Video Compatibility	DivX3.11
	Up to the latest V
SPEC	

- When playing the DivX disk, you can select the desired file by using the ▲▼ button while the file list is displayed.
- Among the available DivX audio formats, only AC3 is supported.
- WMV V8 is not supported for WMV file.
- When burning a subtitle file to a CD-R, the file name must be identical to the movie file name.
- DivX Disc does not playing when its size is over 4GB.
- Some of the discs recorded in DivX or MP3 may not be played back correctly or couldn't be played back at all depending on the recording conditions.
- To view the DivX subtitle correctly, you must select the subtitle language that is used when the subtitle was created.
- To select the desired subtitle language, press the SUBTITLE button while playing the DivX file.
- The supported MP3 bit rate is 32Kbps~320Kbps (8Kbps~48Kbps).

Note

- To play DivX files protected by DRM, you must register the player. Press the TOOLS button and select Registration. Use the registration code to register the player.
- Files that exceed 4GB cannot be played.
- Subtitles longer than 1 hour 30 minutes may not be displayed properly.
- Subtitles are displayed only for the first 10 minutes of a movie.
- Subtitles do not appear when you search a movie.
- Subtitles do not appear when you select the menu.
- Subtitles do not appear when you select the menu.

DivX Feature Table

Note

- When playing a file that contains both video and audio data, the video may not be played smoothly depending on the transmission speed.
- Files recorded with GMC higher than 1 point may not be played back properly.
- Files recorded with QPEL are not supported.
- Files recorded with a resolution higher than the supported resolution may not be played back properly.
- Files recorded with a frame rate higher than the supported frame rate may not be played back properly.
- Files recorded with a bit rate higher than the supported bit rate may not be played back properly.
- Files recorded with a sampling frequency higher than the supported sampling frequency may not be played back properly.
- Files recorded with a sampling frequency higher than the supported sampling frequency may not be played back properly.

Downloaded From Disc-Player.com Samsung Manuals

Fast Playback

Downloaded From Disc Player.com Samsung Manuals

Downloaded From Disc Player.com Samsung Manuals

Fast Playback

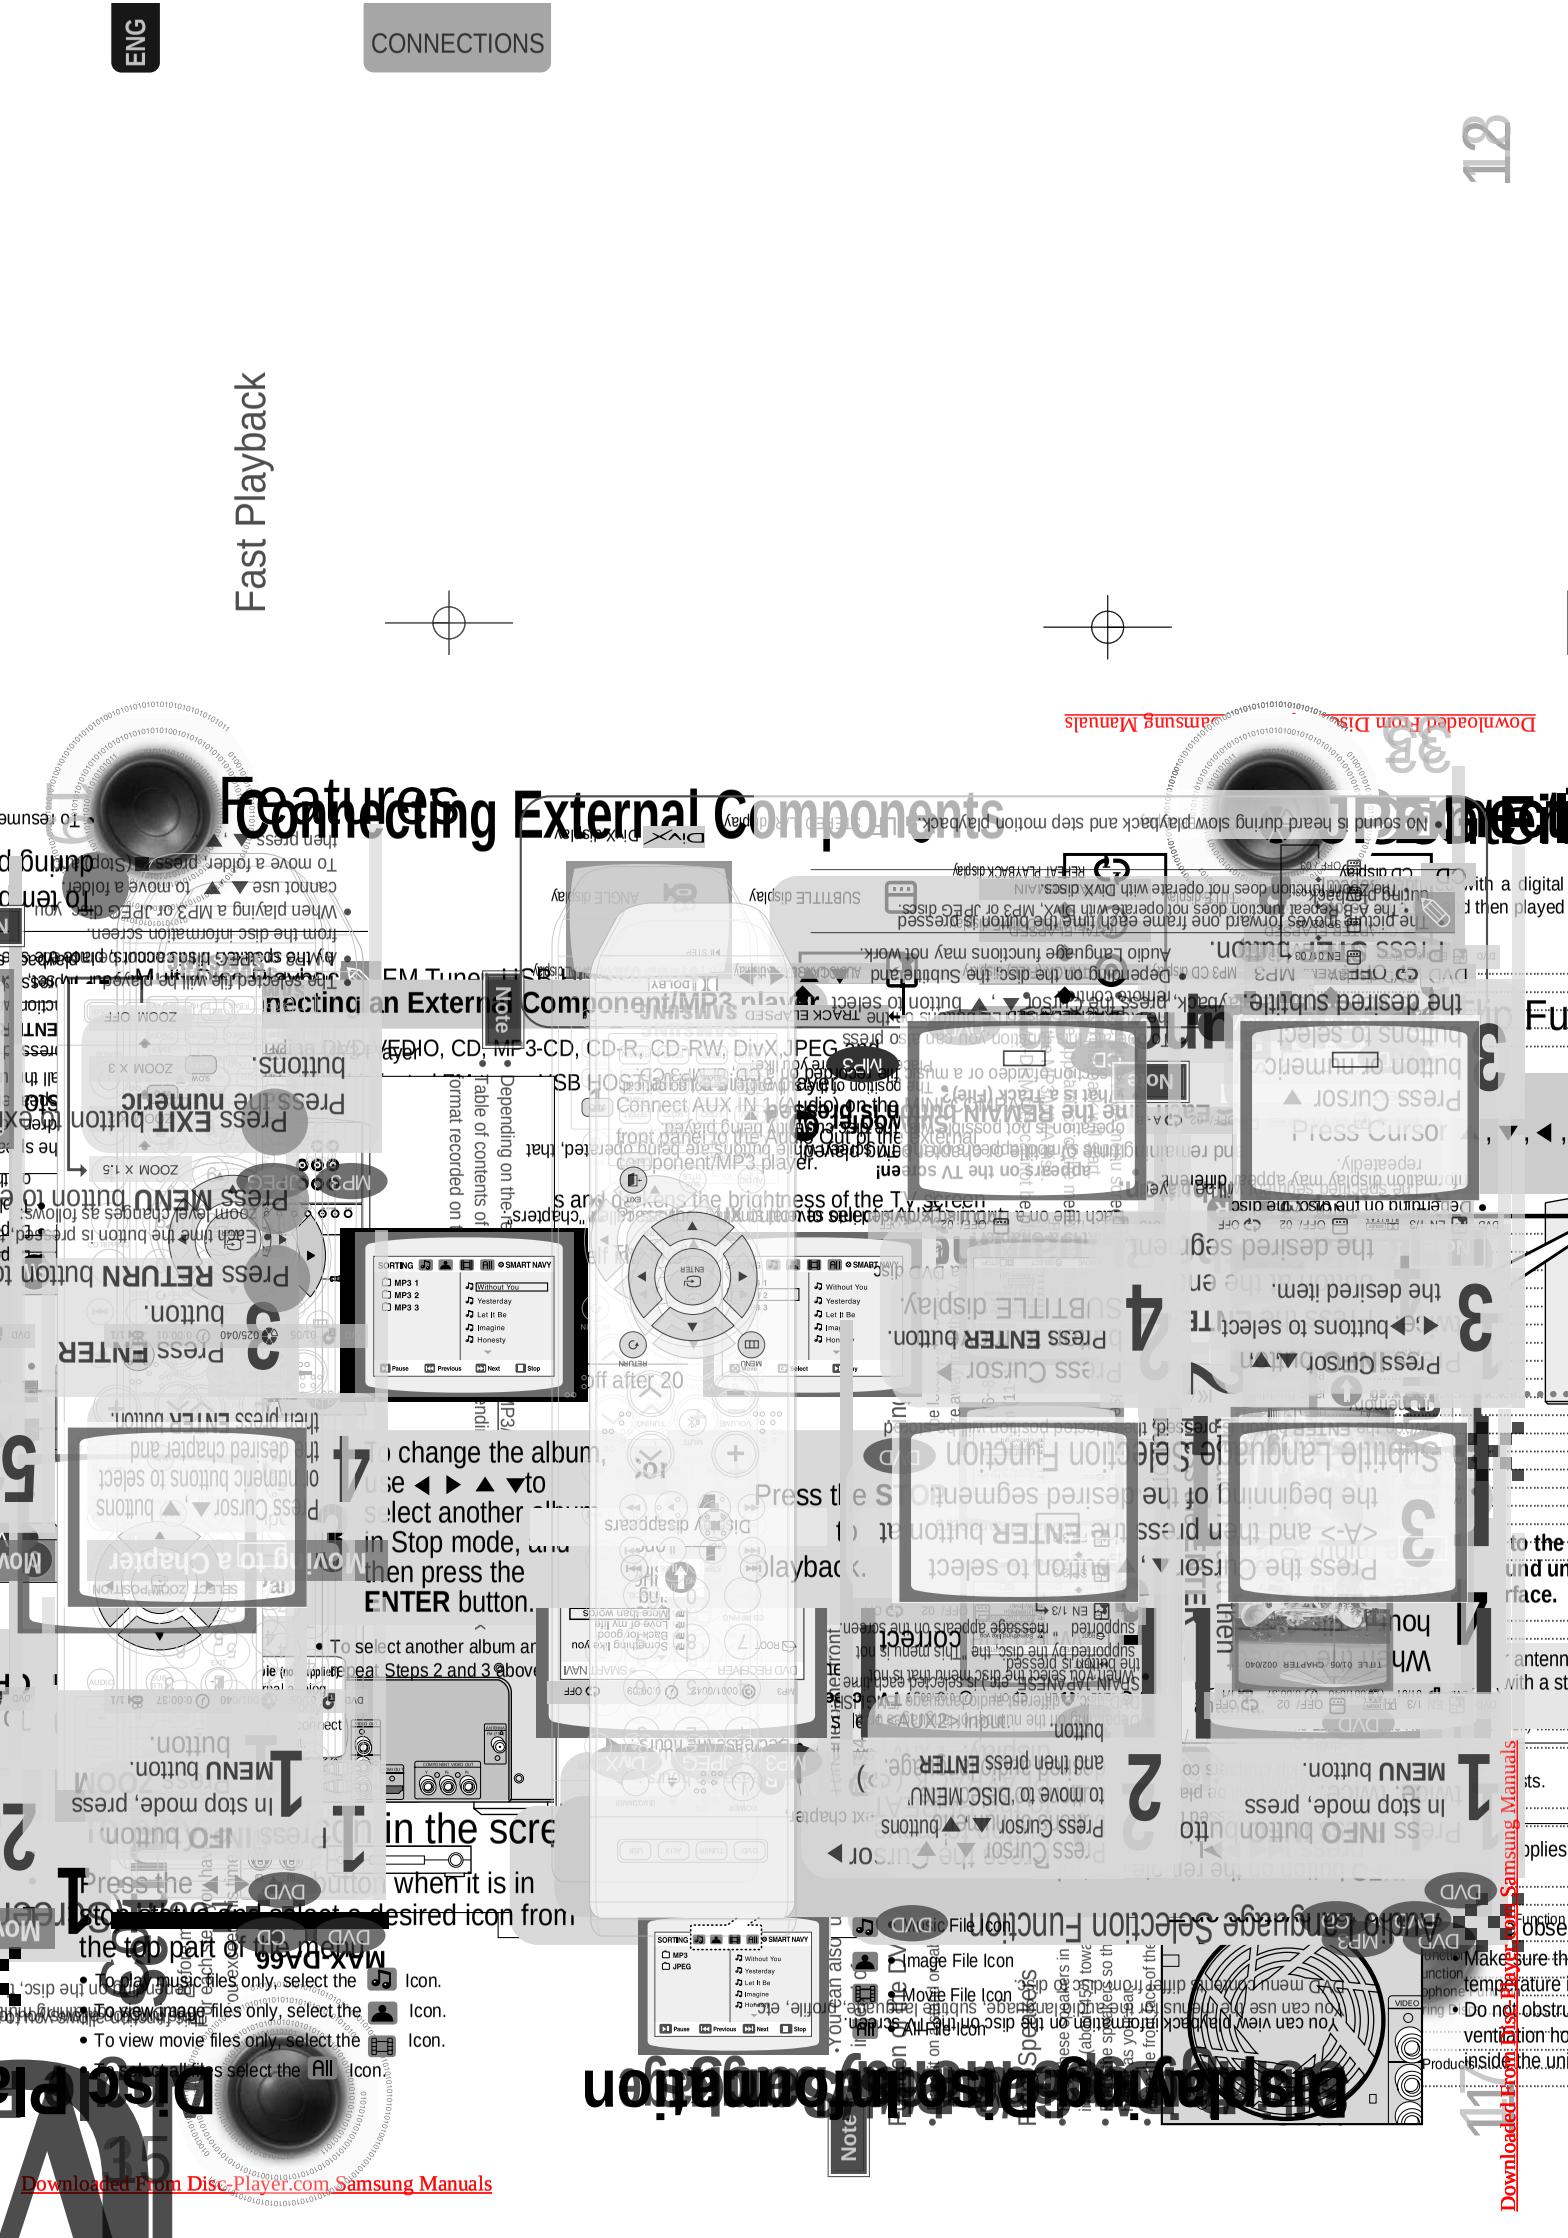

Downloaded From Disc Player.com Samsung Manuals

Playing Media Files using the USB feature

You can connect and play files from external USB storage devices such as MP3 players, USB flash memory, etc. using the player's USB function.

- Video files (DivX, WMV, MPEG, etc.) are supported.
- To prevent the loss of data saved in the USB device, switch it to another mode before disconnecting the device.
- USB SORTING: Switches between folder and file mode.
- "USB" appears on the display screen and then disappears.
- Music File Icon

Skip Forward/Back

During playback, press the ◀◀ ▶▶ button.

- When there is more than a file, when you press the ▶▶ button, the next file is selected.
- When there is more than a file, when you press the ◀◀ button, the previous file is selected.

Fast playback

To play back the disc at a faster speed, press ◀◀ or ▶▶ button during playback.

- Each time you press either button, the playback speed will change as follows:
  2x 4x 8x 32x Normal.

Compatible Devices

1. USB devices that support USB Mass Storage v1.0.
(USB devices that operate as a removable disk in Windows (2000 or later) without additional driver installation.)
2. MP3 Player: HDD and flash type MP3 player.
3. Digital camera: PTP protocol is not supported.
   - Devices which require additional program installation when you have connected it to a computer, are not supported.
4. USB HDD and USB Flash Drive: Devices that support USB2.0 or USB1.1.
   - You may experience a difference in playback quality when you connect a USB1.1 device.
   - For a USB HDD, make sure to connect an auxiliary power cord to the USB HDD for proper operation.
5. USB card Reader: One slot USB card reader and Multi slot USB card reader
   - Depending on the manufacturer. the USB card reader may not be supported.
   - If you install multiple memory devices into a multi card reader, you may experience problems.

Supported Formats

	File name	File extension	Bit rate	Version	Pixel	Sampling Frequency
Still Picture		.JPG .JPEG	–	–	640*480	–
Music	MP3	.MP3	80~384kbps	–	–	44.1kHz
	WMA	.WMA	56~128kbps	V8	–	44.1kHz
Movie	WMV	.WMV	4Mbps	V1,V2,V3,V7 (V9 is not supported)	720*480	44.1KHz~48KHz
	DivX	.AVI,.ASF	4Mbps	DivX3.11~DivX5.1,XviD	800*600	44.1KHz~48KHz

- A device using NTFS file system is not supported.(Only FAT file system is supported.)

The USB host function of this product does not support all USB devices.
For the information on the supported devices,please see the page 60.

OPERATION

Downloaded From Disc-Player.com Samsung Manuals

Fast Playback

Downloaded From Disc Player.com Samsung Manuals

Downloaded From Disc_Player.com Samsung Manuals

Downloaded From Disc_Player.com Samsung Manuals

Fast Playback

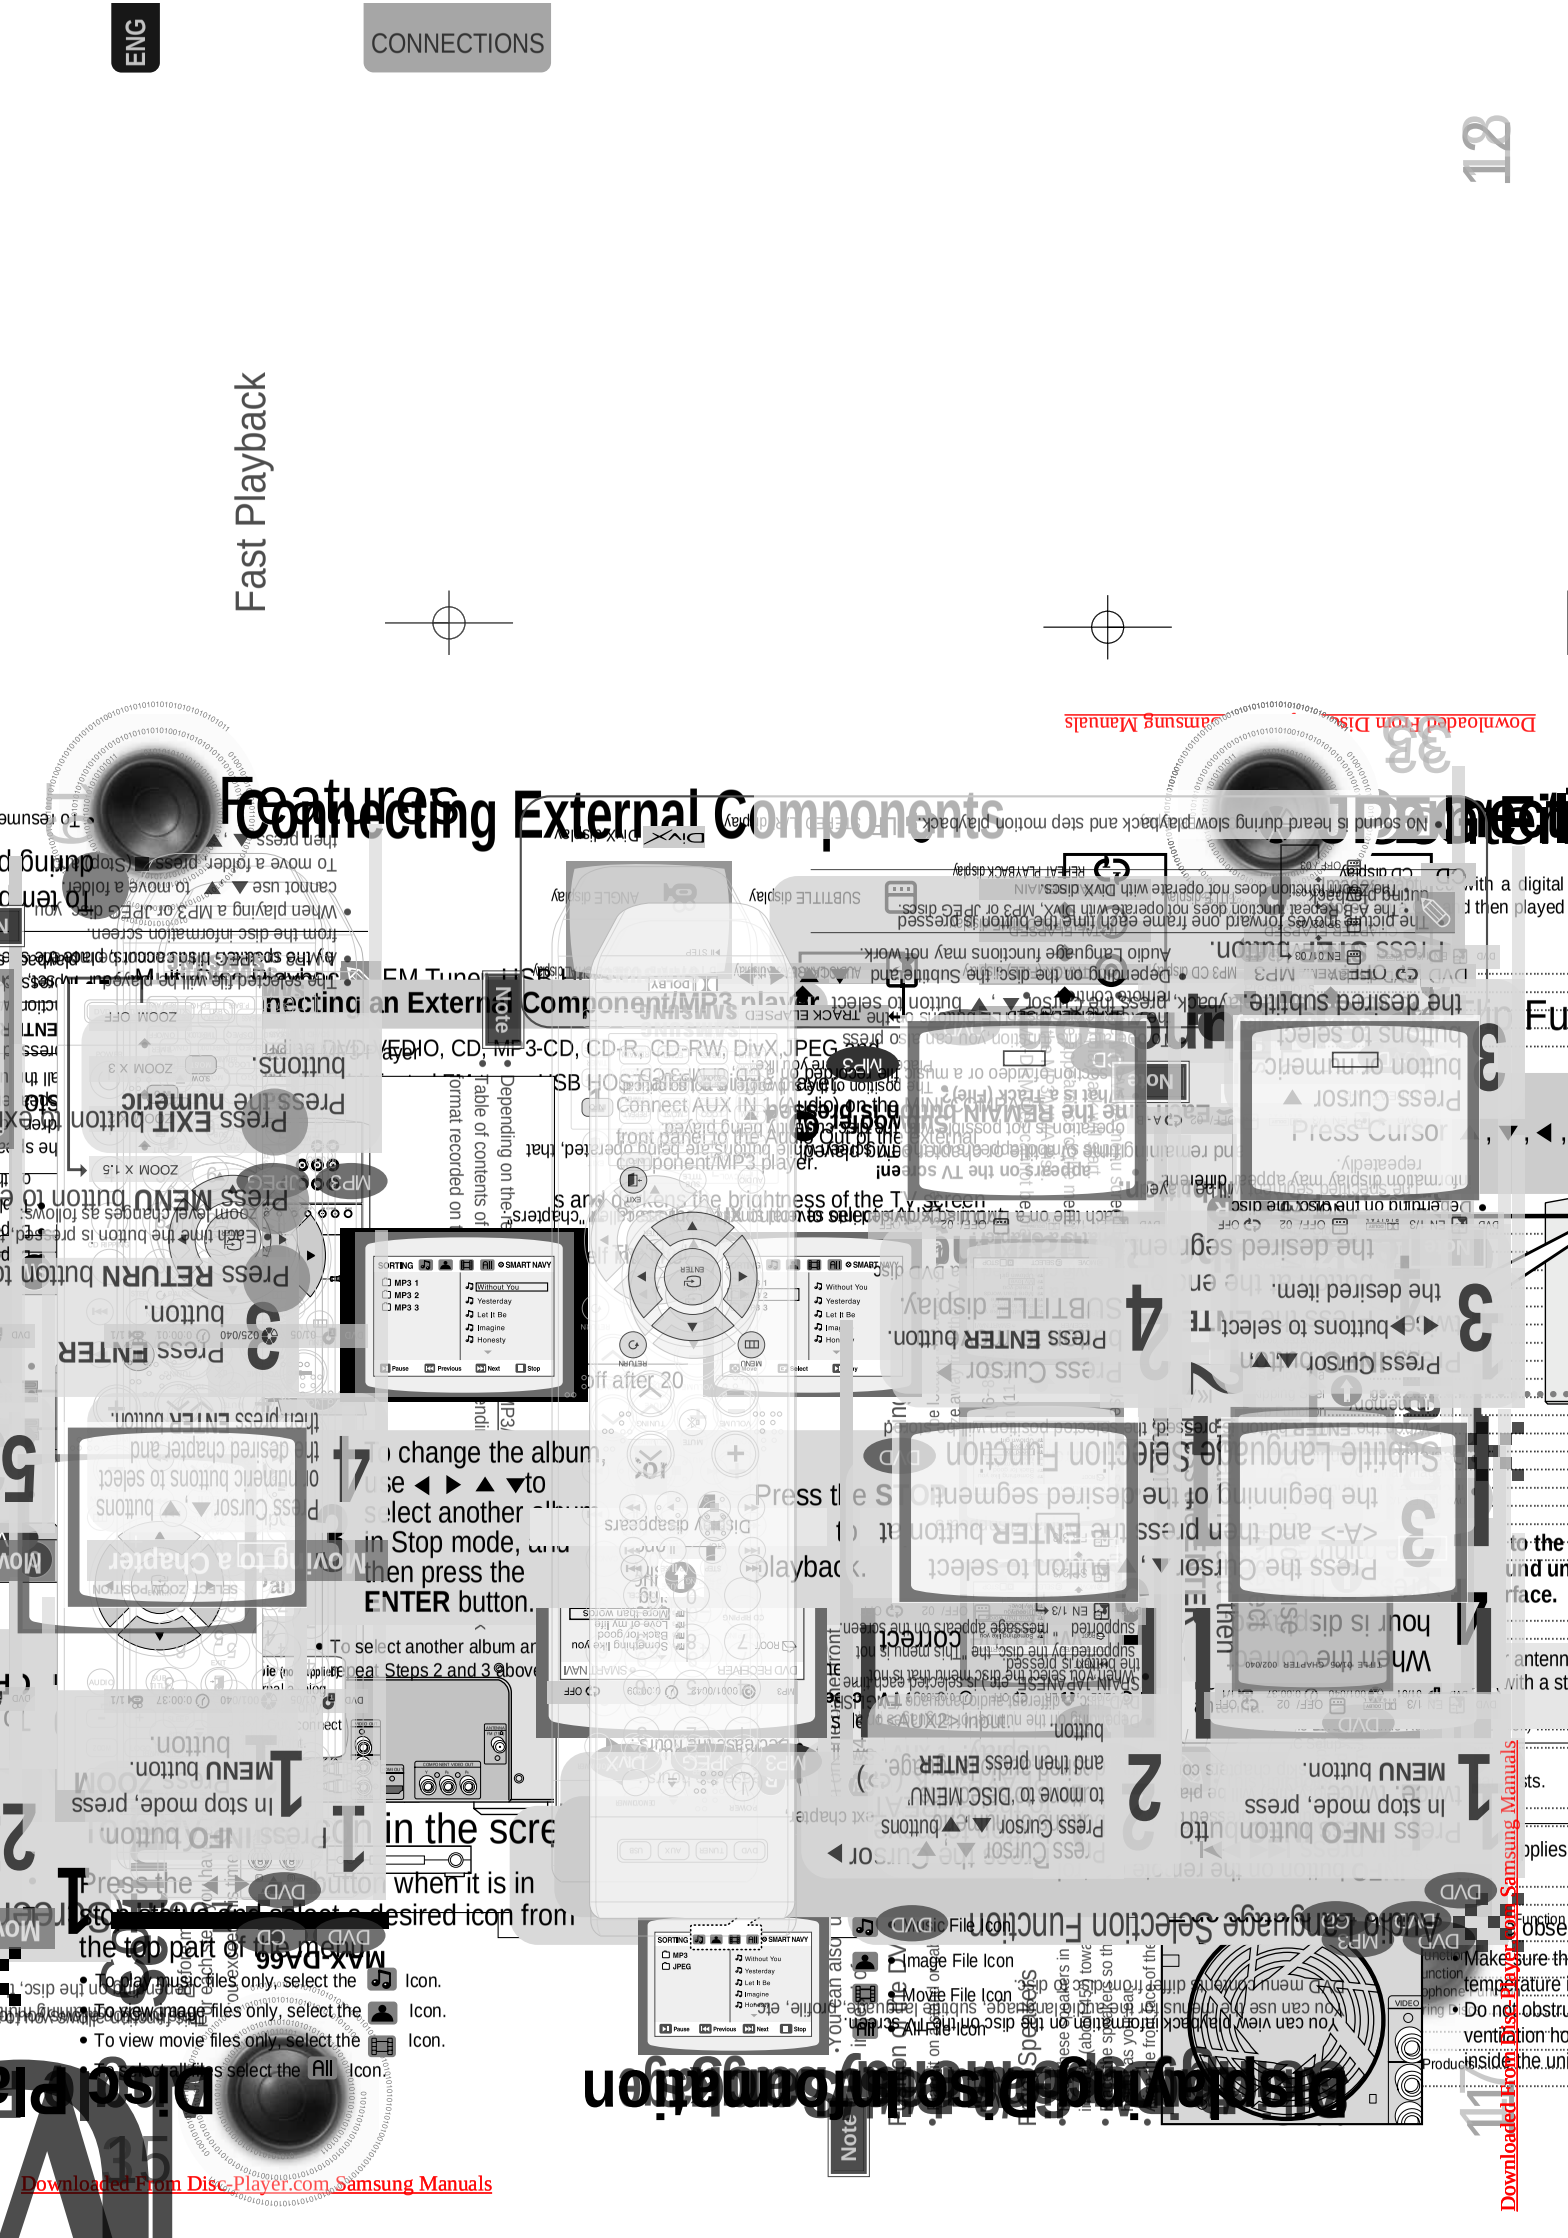

Downloaded From Disc Player.com Samsung Manuals

Fast Playback

Downloaded From Disc Player.com Samsung Manuals

Downloaded From Disc Player.com Samsung Manuals

Downloaded From Disc-Player.com Samsung Manuals

Connecting Headphones/Microphone

Example: You wish to wake up to music every morning.

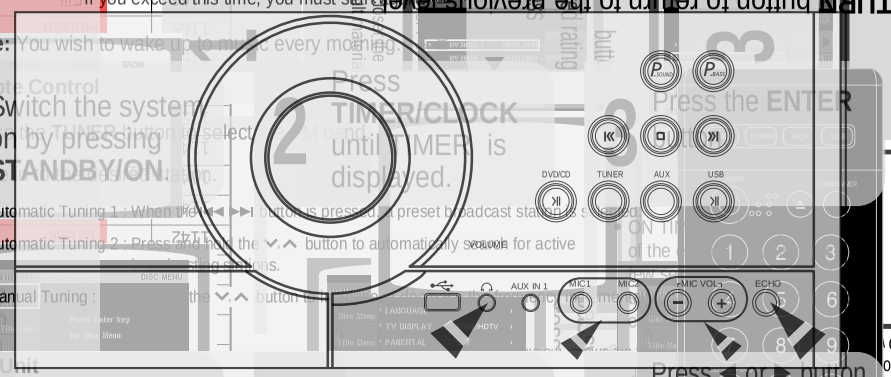

1 Switch the system on by pressing **STANDBY/ON**.

2 Press **TIMER/CLOCK** until TIMER is displayed.

3 Press ◀ or ▶ button to select <AUTO> and then press the ∣◀◀/▶▶∣ button to automatically search the band.

- The minutes flash.

4 Set the timer switch-on time.

- Connect one or two Microphones.
- Press the **ECHO** button to select ECH.
- MIC output is not available while HDM

5 Set the timer switch-off time.

- VOL 10 is displayed, where 10 corresponds to the volume already set.

6 Press ◀ or ▶ button to adjust the volume level and press **ENTER**.

7 Press ◀ or ▶ button to select the source to be played when the system switches on.

- TUNER (radio) : a Press **ENTER**.
  b Select a preset station by pressing ◀ or ▶.
- DVD/CD (compact disc) : Load a disc.
- USB :Insert a USB.

8 Press **ENTER** to confirm the timer.

9 Press **POWER** to set the system to standby mode.

Press **RETURN** button to return to the previous screen.

Press **MENU** button to exit the setup screen.

Note

- Connecting/use of headphones at a high volume may damage your hearing.
- When CD Ripping, CD audio can't be out.
- If the timer switch on and off times are identical, the word ERROR is displayed.
- You can also use ∣◀◀/▶▶∣ button on the front panel to instead ◀, ▶button on the remote control in step 4,5,6,7.

Downloaded From Disc-Player.com Samsung Manuals

Downloaded From Disc-Player.com Samsung Manuals

Troubleshooting

Refer to the chart below when this unit does not function properly. If the problem you are experiencing is not listed below or if the instruction below is not helpful, turn off the unit, disconnect the power cord, and contact the nearest authorized dealer or Samsung Electronics service center.

Symptom	Check/Remedy
I can't eject the disc.	• Is the power cord plugged securely into the outlet? • Turn off the power and then turn it back on.
Playback does not start.	• Check the region number of the DVD disc. DVD discs purchased from abroad may not be playable on this player. CD-ROMs cannot be played on this player. Discs with scratches or dirt on them may not play properly.
The remote control does not work.	• Is the player in the "NO DISC" mode? Load a disc. • Are the batteries installed with the polarity (+/-) in the right direction? • Are the batteries dead? Replace them with new ones. • Is the remote sensor exposed to direct sunlight or fluorescent lighting?
Playback does not start immediately when Play/Pause button is pressed.	• Is the disc dirty or damaged? Clean it with a cloth. • Is the disc loaded upside down? Load it with the label side facing up.
Sound is not produced.	• Is the TV power on? • Are the video cables connected properly? • Is the disc dirty or damaged? • A poorly manufactured disc may not be playable.
Picture does not appear, is not produced, or the disc tray opens 2 to 5 seconds after pressing PLAY.	• Is the power cord plugged securely into the outlet? • Turn off the power and then turn it back on.
• Disc is rotating but no picture is produced. • Picture quality is poor and picture is shaking.	• Check the region number of the DVD disc. DVD discs purchased from abroad may not be playable on this player. CD-ROMs cannot be played on this player. Discs with scratches or dirt on them may not play properly.

Setting the Wallpaper

Symptom	Check/Remedy
Audio language and subtitles do not work.	• Audio language and subtitles will not work for DVDs not containing them. And depending on the disc, they may work differently.
Menu screen does not appear even when the [illegible] function is selected.	• Are you using a disc that does not contain menus?
Aspect ratio cannot be changed.	• You can play 16:9 DVDs in 16:9 WIDE mode, 4:3 LETTER BOX mode, or 4:3 PAN SCAN mode, but 4:3 DVDs can be seen in 4:3 ratio only. Refer to the DVD disc jacket and then select the appropriate function.
Can't receive radio broadcasts.	• Is the antenna connected properly? • If the antenna's input signal is weak, install an external FM antenna in an area with good reception.
The unit is not working. (The power goes off or the keyboard is not responding.)	• Turn off the power and hold the **STOP** button on the main unit for longer than 5 seconds. Using the RESET function will erase all stored settings. Do not use this unless necessary.
The rating level you forgotten.	• While the player is in **"NO DISC"** mode, hold the main unit's **STOP** for longer than 5 seconds. "INITIAL" appears on the display and all settings will return to the default values. • Press the POWER button. **Using the RESET function will erase all stored settings.** **Do not use this unless necessary.**

Press **EXIT** button to exit the setup screen.

Downloaded From Disc-Player.com Samsung Manuals

Downloaded From Disc-Player.com Samsung Manuals

Presetting Stations

Example: You wish to wake up to music every morning.

1 Switch the system on by pressing STANDBY/ON.

2 Press TIMER/CLOCK until TIMER is displayed.

3 Press ◀ or ▶ button to select <MANUAL> and then press ENTER.

4 Set the timer switch-on time.

a. Set the hour by pressing ◀ or ▶ button.

b. Press ENTER. The minutes flash.

c. Set the minutes by pressing ◀ or ▶ button.

d. Press ENTER.

5 Set the timer switch-off time.

Press ◀ or ▶ button to select <AUTO> and then press the ⏮/⏭ button to automatically search the band for active broadcast stations.

Press ◀ or ▶ button to select <MANUAL> and then press the ⏮/⏭ button to tune in to a lower or higher frequency.

6 Press ◀ or ▶ button to adjust the volume level and press ENTER.

- VOL 10 is displayed, where 10 corresponds to the volume already set.

7 Press ◀ or ▶ button to select the source to be played when the system switches on.

- TUNER (radio) : a Press ENTER. b Select a preset station by pressing ◀ or ▶.
- DVD/CD (compact disc) : Load a disc.
- USB : Insert a USB.

8 Press ENTER to confirm the timer.

9 Press POWER to set the system to standby mode.

Press RETURN button to return to the previous level.

Press MENU button to exit the setup screen.

Note

- The timer enables you to switch the system on or off at specific times.
- If you do not want the system to switch on or off every day, you can set the timer to activate only once, or on specific days of the week.
- Before setting the timer, check that the current time is set correctly.
- For each step, you have a few seconds to set the required options. If you exceed this time, you must start again.
- If the timer switch on and off times are identical, the word ERROR is displayed.
- You can also use ⏮/⏭ button on the front panel to instead ◀, ▶button on the remote control in step 4,5,6,7.

Downloaded From Disc-Player.com Samsung Manuals

Downloaded From Disc-Player.com Samsung Manuals

Troubleshooting

Refer to the chart below when this unit does not function properly. If the problem you are experiencing is not listed below or if the instruction below is not helpful, turn off the unit, disconnect the power cord, and contact the nearest authorized dealer or Samsung Electronics service center.

Symptom	Check/Remedy
I can't select the desired menu.	• Audio language and subtitles will not work for DVDs not containing them. And depending on the disc, they may work differently.
Playback does not start even when the Menu screen does not appear even when the [illegible] function is selected.	• Are you using a disc that does not contain menus?
The remote control does not work. Aspect ratio cannot be changed.	• You can play 16:9 DVDs in 16:9 WIDE mode, 4:3 LETTER BOX mode, or 4:3 PAN SCAN mode, but 4:3 DVDs can be seen in 4:3 ratio only. Refer to the DVD disc jacket and then select the appropriate function.
Playback does not start immediately when Can't receive radio broadcasts.	• Is the antenna connected properly? • If the antenna's input signal is weak, install an external FM antenna in an area with good reception.
Sound is not produced. The unit is not working. (The power goes out or is not ready.)	• Turn off the power and hold the **STOP** button on the main unit for longer than 5 seconds. Using the RESET function will erase all stored settings. Do not use this unless necessary.
Picture does not appear, is not produced, or the disc tray opens 2 to 5 seconds after pressing the PLAY button.	• While the player is in **"NO DISC"** mode, hold the main unit's **STOP** for longer than 5 seconds. "INITIAL" appears on the display and all settings will return to the default values. • Press the POWER button. **Using the RESET function will erase all stored settings.** **Do not use this unless necessary.**
• Disc is rotating but no picture is produced. • Picture quality is poor and picture is shaking.	

Downloaded From Disc-Player.com Samsung Manuals

Downloaded From Disc-Player.com Samsung Manuals

Downloaded From Disc-Player.com Samsung Manuals

Connecting Headphones/Microphone

Example:

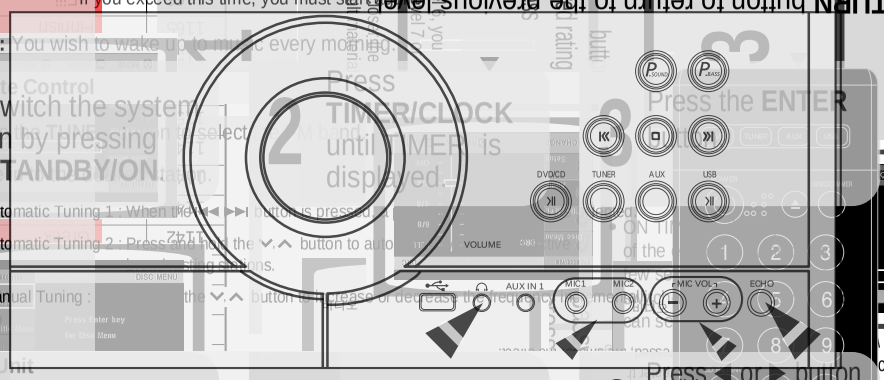

1 Switch the system on by pressing STANDBY/ON.

2 Press TIMER/CLOCK until TIMER is displayed.

3 Press the ENTER button.

4 Set the timer switch-on time.

5 Set the timer switch-off time.

6 Press ◀ or ▶ button to adjust the volume level and press ENTER.

Connect the headphones to the **PHONES** jack on the front panel.

Plug a microphone with a 3.5ø MIC jack into the Mic 1 or 2 terminal.

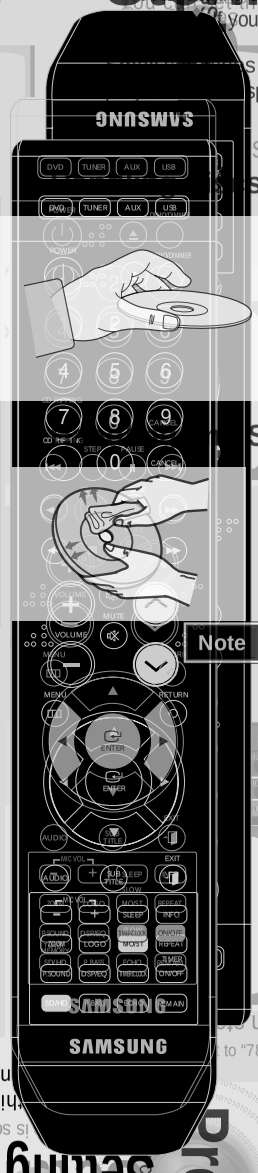

Note

- Connect one or two Microphones.
- Press the ECHO button to select ECHO.

7 Press ◀ or ▶ button to select the source to be played when the system switches on.

8 Press ENTER to confirm the timer.

9 Press POWER to set the system to standby mode.

Note

- Playing with use of headphones at a high volume may damage your hearing.
- When CD Ripping, CD audio can't be out.

Press RETURN button to return to the previous level.

Press MENU button to exit the setup screen.

Note

- If the timer switch on and off times are identical, the word ERROR is displayed.
- You can also use ⏮/⏭ button on the front panel to instead ◀, ▶button on the remote control in step 4,5,6,7.

Press EXIT button to exit the setup screen.

Presetting Stations

Downloaded From Disc-Player.com Samsung Manuals

Downloaded From Disc-Player.com Samsung Manuals

Presetting Stations

You can store up to:
- 50 FM stations

Connecting Headphones/Microphone

Connect the headphones to the **PHONES** jack on the front panel.

Plug a microphone with a 3.5ø MIC jack into the Mic 1 or 2 terminal.

Setting the Dolby Pro Logic Mode (Compression)

Press **POWER** to set the system to standby mode.

Press **RETURN** button to return to the previous level.

Press **MENU** button to exit the setup screen.

Downloaded From Disc-Player.com Samsung Manuals

Downloaded From Disc-Player.com Samsung Manuals

Connecting Headphones/Microphone

Connect the headphones to the **PHONES** jack on the front panel.

Plug a microphone with a 3.5ø MIC jack into the Mic 1 or 2 terminal.

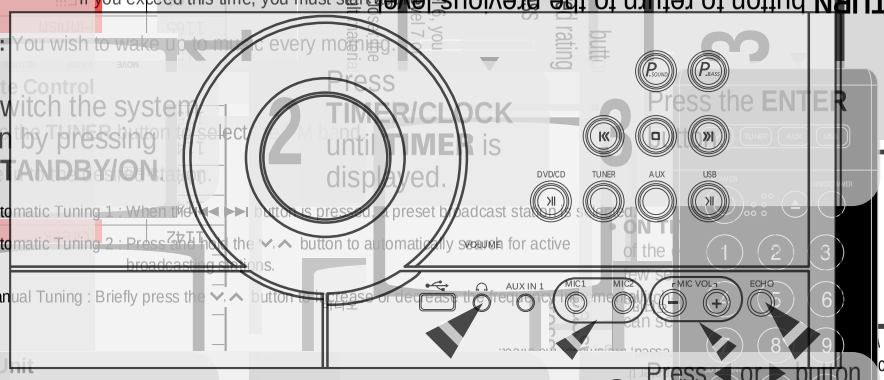

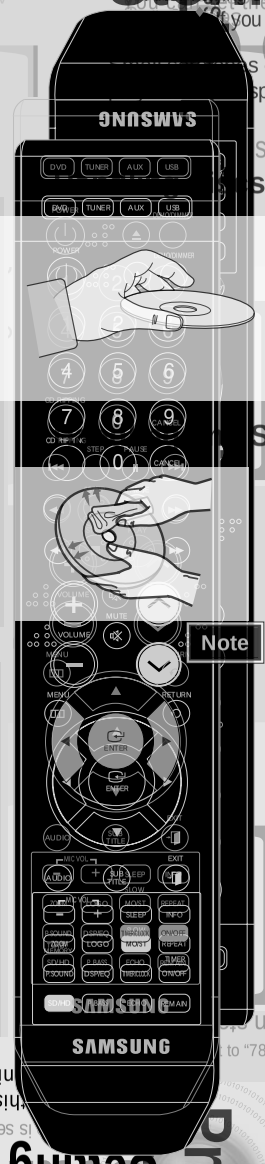

- Playing with the headphones at a high volume may damage your hearing.
- When CD Ripping, CD audio can't be out.

Note

- Connect one or two Microphones.
- Press the **ECHO** button to select ECHO.
- MIC output is not available while HDMI is connected.

Note

Setting the Dual Sound (Dynamic Compression)

Press **POWER** to set the system to standby mode.

Press **RETURN** button to return to the previous level.

Press **MENU** button to exit the setup screen.

Note

- If the timer switch on and off times are identical, the word **ERROR** is displayed.
- You can also use ⏮/⏭ button on the front panel to instead ◀, ▶button on the remote control in step 4,5,6,7.

Presetting Stations

You can store up to:

Downloaded From Disc-Player.com Samsung Manuals

POWER SOUND / POWER BASS / DSP/EQ Function

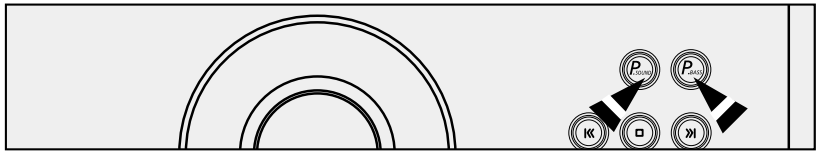

Your mini-compact system is equipped with the function of Power Sound.
The function of Power Sound amplifies bass and improves high key or bass twice as much for you to appreciate powerful real sound.

Press the **P.SOUND** button

Result: "**P.SOUND**" is displayed and "**P,SOND**" is displayed for a few seconds.
To cancel this function, press **P.SOUND** again, "**PASS**" is displayed for a few seconds, and P.SOUND disappears.

➢ When CD Ripping,the P.SOUND function can't work and the P.SOUND automatically covert to "OFF" mode.

Your mini-compact system has a bass amplification function called SBS (Super Bass Sound). This function makes the sound more powerful and real.

Press the **P.BASS** button.

Result: **BASS** is displayed and "**P. BASS**" is displayed for a few seconds.
To cancel this function, press **P.BASS** again, "**OFF**" is displayed for a few seconds.

➢ When CD Ripping,the P.BASS function can't work and the P.BASS automatically covert to "OFF" mode.

Press **DSP/EQ** on the remote control until the required option is selected.

Your mini-compact system is equipped with a preset equalizer that allows you to choose the most appropriate balance between treble and bass frequencies, according to the type of music you are listening to.

To obtain a...	Select...
Normal balance (linear)	PASS
Balance suitable for pop music	POP
Balance suitable for jazz music	JAZZ
Balance suitable for rock music	ROCK
Balance suitable for studio	STUDIO
Balance suitable for club	CLUB
Balance suitable for hall	HALL
Balance suitable for movie	MOVIE
Balance suitable for chur ch	CHUR CH

➢ When CD Ripping,the DSP/EQ function can't work and the DSP/EQ automatically covert to "PASS" mode.

Downloaded From Disc-Player.com Samsung Manuals

CD RIPPING Function

ENG

You can rip a compact disc as a MP3 file on the USB
This feature enables you to ripping with the start of the disc or track of your choice.

1 Switch the system on by pressing **STANDBY/ON**.

2 Connect the USB.

3 Load a compact disc(Digital Audio).

- Press the **OPEN/CLOSE** button to open the disc tray.
- Insert a CD and press the **OPEN/CLOSE** button to close the disc tray.
- Use the CD selection (⏮/⏭) buttons to select the desired song.

4 Press CD RIPPING button on remote control to starting ripping.

- If the system is either at pause or playing state,turn the CD RIPPING dial down or press CD RIPPING button on the remote control to start the ripping for the current track.
- Turn CD RIPPING dial up or press and hold CD RIPPING button on the remote control to start ripping the all tracks of Disc.
- "CD Ripping" is displayed in red and CD RIPPING starts.
- During CD ripping, do not disconnect USB device.

5 To stop ripping, press STOP ▫ button.and then automatically create and save as the MP3 file.

After CD-Ripping,a directory named "RIPPING" will be created in your device.The file name follows the format:"SAM_XXXX".MP3.

Note

- Don't disconnected USB and AC Cord during CD-Ripping.This may cause the file damage.If you want to stop CD-Ripping during CD-Ripping,you must press stop Key first and after the CD Stopped,then you can remove the USB device.
- If you disconnected USB device when CD Ripping,the main unit will be power off and you may not delete the ripped file,In this case, please connect the USB on the PC and backup the USB data on the PC first and then formate the USB device .
- On the CD playing ,connect the USB,the CD play will be paused and will resume playing till the USB initilization finished.
- According the different USB the initilization time maybe different.
- When the USB memory is not enough,it will be displayed "NOT ENOUGH MEMORY"
- DTS-CD can't for CD Ripping.
- Starting CD ripping within 5 seconds can't create the CD Ripping file.
- Ripping file is only created when CD Ripping is stopped afters 5 seconds(ex. SAM_0001.MP3).
- With external HDD,FAT format the USB can be CD Ripping,but not NTFS.The CD Ripping function of this product does not support all USB devices.
- When you use CD high speed search function,the CD Ripping can't work.
- When CD Ripping, CD audio can't be out.
- During CD Ripping,do not deal impact.If is shocked while CD Ripping,CD Ripping maybe disengage.
- Sometimes, some of USB devices, CD Ripping time is long.
- If you use scratched disc for CD Ripping, or connect/disconnect HDMI cable during CD Ripping, there might be some noise and broken sound on ripped file.
- When HDMI audio on, the CD RIPPING can't work.

CD Ripping Feature Supported Player

Product	Company	Type
YP-T8	Samsung	MP3 Player
YP-T7F	Samsung	MP3 Player
YP-D1	Samsung	MP3 Player
YP-T8N	Samsung	MP3 Player
YP-U2	Samsung	MP3 Player
YP-T9	Samsung	MP3 Player
YP-K5	Samsung	MP3 Player
YP-K3	Samsung	MP3 Player
YV-150	Samsung	MP3 Player
YP-U3	Samsung	MP3 Player

MISCELLANEOUS

Sleep Timer Function / Mute Function

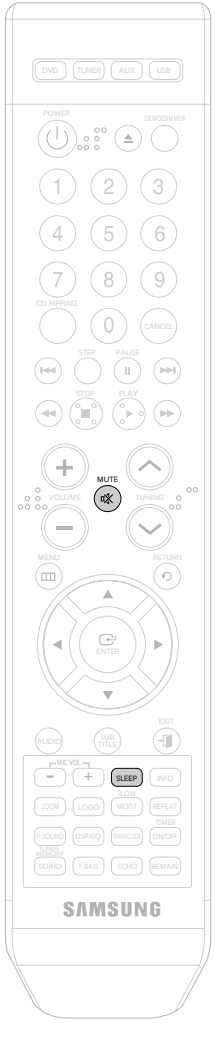

Sleep Timer Function

You can set the time that the DVD player will shut itself off.

Press **SLEEP** button.

- Each time the button is pressed, the selection changes as follows: **90 MIN → 60 MIN → 45 MIN → 30 MIN → 15 MIN → OFF**.

To confirm the sleep timer setting, press **SLEEP** button.

- The remaining time before the DVD player will shut itself off is displayed.
- Pressing the button again changes the sleep time from what you have set earlier.

To cancel the sleep timer, press **SLEEP** button until OFF appears on the display.

Mute Function

This is useful when answering a doorbell or telephone call.

Press **MUTE** button.

- '**MUTE** ' appears in the display.
- To turn off mute, press the button again.

DEMO Function / DIMMER Function

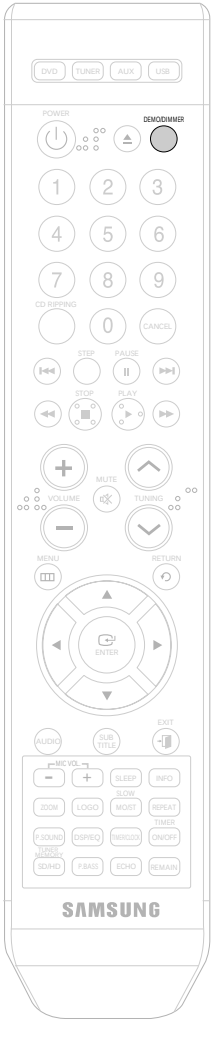

DEMO Function

You can view the various functions available on your system.

Press **DEMO/DIMMER** button.

- The various functions available are listed in turn on the display.
- All these functions are described in detail in this booklet. For instructions on how to use them, refer to the appropriate sections.

DIMMER Function

You can adjust the brightness of the display on the main unit so it won't interfere with your movie viewing.

Press **DEMO/DIMMER** button.

- Each time the button is press, the brightness changes as follows: **DIMMER ON(Dim) → DIMMER OFF(Bright)**.

To cancel this function, press **DEMO/DIMMER** again.

Note

Press any buttons to cancel DEMO function.
When you turn off the main unit, DEMO function will be auto start after 10 senconds. if you want to cancel this DEMO function, press DEMO/DIMMER button again.

Downloaded From Disc-Player.com Samsung Manuals

Downloaded From Disc-Player.com Samsung Manuals

Connecting Headphones/Microphone

Example: You wish to wake up to music every morning.

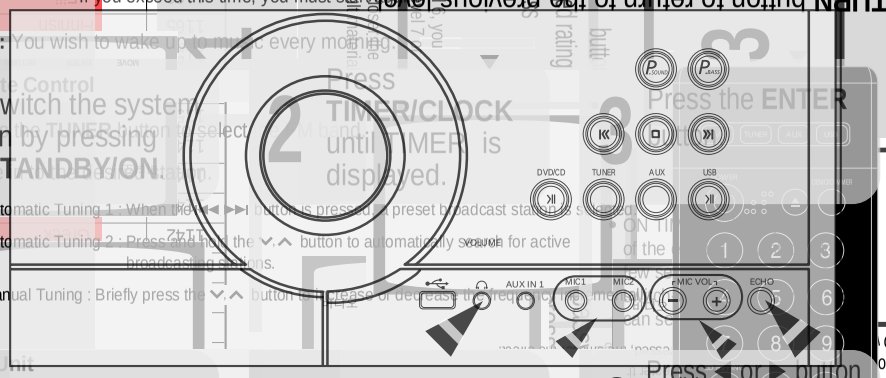

1 Switch the system on by pressing **STANDBY/ON**.

2 Press **TIMER/CLOCK** until TIMER is displayed.

3 Press ENTER.

4 Set the timer switch-on time.

- Automatic Tuning 1 : When the ◀◀ or ▶▶I button is pressed, a preset broadcast station is selected.
- Automatic Tuning 2 : Press and hold the ∨ or ∧ button to automatically search for active broadcasting stations.
- Manual Tuning : Briefly press the ∨ or ∧ button repeatedly to select the desired frequency.

a. Set the hours by pressing ∨ or ∧.

b. Press ENTER.

c. Set the minutes by pressing ∨ or ∧.

d. Press ENTER.

- OFF TIME is displayed (indicator of the equalizer symbols) for a few seconds, followed by any set switch-off time.

5 Set the timer switch-off time.

- Set the hours by pressing ∨ or ∧ button.
- Press ENTER.
- Set the minutes by pressing ∨ or ∧ button.
- Press ENTER.
- VOL 10 is displayed, where 10 corresponds to the volume already set.

6 Press ◀ or ▶ button to adjust the volume level and press ENTER.

7 Press ◀ or ▶ button to select the source to be played when the system switches on.

- TUNER (radio) : a Press ENTER. b Select a preset station by pressing ∨ or ∧.
- DVD/CD (compact disc) : Load a disc.
- USB : Insert a USB.

8 Press ENTER to confirm the timer.

9 Press POWER to set the system to standby mode.

Note

- Prolonged use of headphones at high volume may damage your hearing.
- When CD Ripping, CD audio can't be out.
- If the timer switch on and off times are identical, the word ERROR is displayed.
- You can also use ⏮/⏭ button on the front panel to instead ◀, ▶ button on the remote control in step 4,5,6,7.

Plug a microphone with a 3.5ø MIC jack into the Mic 1 or 2 terminal.

- Connect one or two Microphones.
- Press the ECHO button to select ECHO.
- MIC output is not available while HDMI is connected.

Press **RETURN** button to return to the previous level.

Press **MENU** button to exit the setup screen.

Downloaded From Disc-Player.com Samsung Manuals

Presetting Stations

Caution: Storing

Example:

1 Press

2 Press

Do no

get o

Do no

3 Press

4 Press

Storing

When

with a

5 Press

6 To pr

Note

Note

Note

Press EXIT button to exit the setup screen.

Downloaded From Disc-Player.com Samsung Manuals

Troubleshooting

Refer to the chart below when this unit does not function properly. If the problem you are experiencing is not listed below or if the instruction below is not helpful, turn off the unit, disconnect the power cord, and contact the nearest authorized dealer or Samsung Electronics service center.

Symptom	Check/Remedy
I can't eject the disc.	• Is the power cord plugged securely into the outlet? • Turn off the power and then turn it back on.
Playback does not start.	• Check the region number of the DVD disc. DVD discs purchased from abroad may not be playable on this player. • CD-ROMs and CD-Rs/CD-RWs cannot be played on this player. • Make sure the rating level setting is not set higher than the disc level. • Is the remote control being operated in the proper manner? • Are the disc and lens dirty?
The remote control does not work.	• Is the remote control being operated in the proper manner? • Are the batteries exhausted?
Playback does not start immediately when Play/Pause button is pressed.	• Are you using a damaged disc or a disc with scratches on it?
Sound is not produced.	• Is the volume adjusted properly? • Was the DVD formatted correctly?
Picture does not appear, is not produced, or the disc tray opens 2 to 5 seconds after pressing PLAY.	• Is the TV power on? • Are the video cables connected properly? • Is the disc dirty or damaged? • A poorly manufactured disc may not be playable.
• Disc is rotating but no picture is produced. • Picture quality is poor and picture is shaking.	• Is the disc dirty or damaged?

Setting the Wallpaper

Symptom	Check/Remedy
Audio language and subtitles do not work.	• Audio language and subtitles will not work for DVDs not containing them. And depending on the disc, they may work differently.
Menu screen does not appear even when the [illegible] function is selected.	• Are you using a disc that does not contain menus?
Aspect ratio cannot be changed.	• You can play 16:9 DVDs in 16:9 WIDE mode, 4:3 LETTER BOX mode, or 4:3 PAN SCAN mode, but 4:3 DVDs can be seen in 4:3 ratio only. Refer to the DVD disc jacket and then select the appropriate function.
Can't receive radio broadcasts well.	• Is the antenna connected properly? • If the antenna's input signal is weak, install an external FM antenna in an area with good reception.
The unit is not working. (The power goes off or the disc does not play.)	• Turn off the power and hold the **STOP** button on the main unit for longer than 5 seconds. Using the RESET function will erase all stored settings. Do not use this unless necessary.
The [illegible] level is forgotten.	• While the player is in **"NO DISC"** mode, hold the main unit's **STOP** for longer than 5 seconds. "INITIAL" appears on the display and all settings will return to the default values. • Press the POWER button. **Using the RESET function will erase all stored settings.** **Do not use this unless necessary.**

Press **EXIT** button to exit the setup screen.

Setting the Wallpaper

Press **MENU** button to exit

Setting the Screen Type

Press **RETURN** button to exit

Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care centre.

Downloaded From Disc-Player.com Samsung Manuals

Downloaded From Disc-Player.com Samsung Manuals

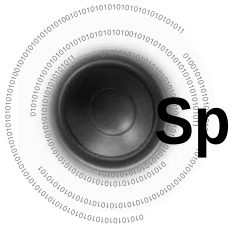

Specifications

GENERAL	Power Consumption	110 W
	Weight	5.1 Kg
	Dimensions (W x H x D)	360 x 150 x 340 mm
	Operating Temperature Range	+5 °C~+35 °C
	Operating Humidity Range	10 % ~ 75 %
FM TUNER	Usable Sensitivity	10 dB
	S/N Ratio	60 dB
	Distortion	0.5 %
VIDEO OUTPUT	Composite Video	1.0 Vp-p(75 Ω load)
	Component Video	Y:1.0 Vp-p(75 Ω load)
		Pr:0.70 Vp-p(75 Ω load)
		Pb:0.70 Vp-p(75 Ω load)
	HDMI	Impedance: 85~115 Ω
AMPLIFIER	Front speaker output	260 W x 2(4 Ω)
	Center speaker output(MAX-DA67 ONLY)	130 W(4 Ω) (MAX-DA67 ONLY)
	Subwoofer speaker output	160 W(3 Ω)
	Frequency range	20 Hz~20 KHz
	S/N Ratio	70 dB
	Channel separation	50 dB
	Input sensitivity	(AUX)500 mV

SPEAKER	Speaker system	2.1ch/3.1ch speaker system		
		Front speaker	Center speaker	Subwoofer speaker
	Impedance	4 Ω	4 Ω	3 Ω
	Frequency range	140Hz~20kHz	140Hz~20kHz	35 Hz~160 Hz
	Output sound pressure level	88 dB	88 dB	90 dB
	Rated input	260 W	130 W	160 W
	Maximum input	520 W	260 W	320 W
	Dimensions (W x H x D)	Front: 220 x 355 x 286 mm		270 x 400 x 286 mm
		Center (MAX-DA67): 360 x 95.5 x 330 mm		
	Weights	Front: 4.2 Kg		6.5 Kg
		Center (MAX-DA67): 2.1 Kg		

Downloaded From Disc-Player.com Samsung Manuals

USB Host Feature Supported Products

DIGITAL CAMERA

Product	Company	Type	Product	Company	Type
Finepix-A340	Fuji	Digital Camera	U300	Olympus	Digital Camera
Finepix-F810	Fuji	Digital Camera	X-350	Olympus	Digital Camera
Finepix-F610	Fuji	Digital Camera	C-760	Olympus	Digital Camera
Finepix-f450	Fuji	Digital Camera	C-5060	Olympus	Digital Camera
Finepix S7000	Fuji	Digital Camera	X1	Olympus	Digital Camera
Finepix A310	Fuji	Digital Camera	U-mini	Olympus	Digital Camera
KD-310Z	Konica	Digital Camera	Lumix-FZ20	Panasonic	Digital Camera
Finecam SL300R	Kyocera	Digital Camera	DMC-FX7GD	Panasonic	Digital Camera
Finecam SL400R	Kyocera	Digital Camera	Lumix LC33	Panasonic	Digital Camera
Finecam S5R	Kyocera	Digital Camera	LUMIX DMC-F1	Panasonic	Digital Camera
Finecam Xt	Kyocera	Digital Camera	Optio-S40	Pentax	Digital Camera
Dimage-Z1	Minolta	Digital Camera	Optio-S50	Pentax	Digital Camera
Dimage Z1	Minolta	Digital Camera	Optio 33LF	Pentax	Digital Camera
Dimage X21	Minolta	Digital Camera	Optio MX	Pentax	Digital Camera
Coolpix4200	Nikon	Digital Camera	Digimax-420	Samsung	Digital Camera
Coolpix4300	Nikon	Digital Camera	Digimax-400	Samsung	Digital Camera
Coolpix 2200	Nikon	Digital Camera	Sora PDR-T30	Toshiba	Digital Camera
Coolpix 3500	Nikon	Digital Camera	Coolpix 5900	Nikon	Digital Camera
Coolpix 3700	Nikon	Digital Camera	Coolpix S1	Nikon	Digital Camera
Coolpix 4100	Nikon	Digital Camera	Coolpix 7600	Nikon	Digital Camera
Coolpix 5200	Nikon	Digital Camera	DMC-FX7	Panasonic	Digital Camera
Stylus 410 digital	Olympus	Digital Camera	Dimage Xt	Minolta	Digital Camera
300-digital	Olympus	Digital Camera	AZ-1	Olympus	Digital Camera
300-digital	Olympus	Digital Camera			Digital Camera

USB FLASH DISC

Product	Company	Type	Product	Company	Type
Cruzer Micro	Sandisk	USB 2.0 USB Flash Drive 128M	XTICK	LG	USB 2.0 128M
Cruzer Mini	Sandisk	USB 2.0 128M	Micro Mini	Iomega	USB 2.0 128M
Cruzer Mini	Sandisk	USB 2.0 256M	iFlash	Imation	USB 2.0 64M
SONY Micro Vault	Sony	USB 2.0 64MB	LG	XTICK(M)	USB 2.0 64M
FLEX DRIVE	Serotech	USB 2.0 32MB	RiDATA	EZDrive	USB 2.0 64M
AnyDrive	A.L tech	USB 2.0 128MB			

MP3 PLAYER

Product	Company	Type	Product	Company	Type
Creative MuVo NX128M	Creative	128 MB MP3 Player	YP-780	Samsung	MP3 Player
Iriver H320	Iriver	20G HDD MP3 Player	YP-35	Samsung	MP3 Player
YH-920	Samsung	20G HDD MP3 Player	YP-55	Samsung	MP3 Player
YP-T7	Samsung	MP3 Player	iAUDIO U2	Cowon	MP3 Player
YP-MT6	Samsung	MP3 Player	iAUDIO G3	Cowon	MP3 Player
YP-T6	Samsung	MP3 Player	iAudio M3	Cowon	HDD MP3 Player
YP-53	Samsung	MP3 Player	SI-M500L	Sharp	256MB MP3 Player
YP-ST5	Samsung	MP3 Player	H10	Iriver	MP3 Player
YP-T5	Samsung	MP3 Player	YP-T5 VB	Samsung	MP3 Player
YP-60	Samsung	MP3 Player	YP-53	Samsung	256MB MP3 Player

Download From Disc-Player.com Samsung Manuals

Troubleshooting

Symptom	Check/Remedy
i can't eject the disc.	¥Is the power cord plugged securely into the outlet? ¥Turn off the power and then turn it back on.
Playback does not start.	¥Check the region number of the DVD. DVD discs purchased from abroad may not be playable. ¥CD-ROMs and CD-ROMs cannot be played. ¥Make sure the rating level setting is not set higher than the DVD disc level.
The remote control does not work.	¥Is the remote control being operated in the proper manner? ¥Are the batteries exhausted?
Playback does not start immediately when Play/Pause button is pressed.	¥Are you using a disc with scratches on it?
Sound is not produced.	¥Is the connection to the external component correct? ¥Is the external component turned on?
Picture does not appear, is not produced, or the disc tray opens 2 to 5 seconds after pressing the MENU button.	¥Was the DVD disc inserted unevenly? Move it to a cold place, and then let it warm to room temperature before using it. ¥Moisture forms inside the player. Remove the disc and let the player stand for 1 or 2 hours with the power turned on. You can then play the disc. ¥Moisture condensation may disappear after condensation.
• Disc is rotating but no picture is produced. • Picture quality is poor and picture is shaking.	¥Is the TV power on? ¥Are the video cables connected properly? ¥Is the disc dirty or damaged? ¥A poorly manufactured disc may not be playable.

Setting the Wallpaper

Symptom	Check/Remedy
Audio language and subtitles do not work.	¥Audio language and subtitles will not work for DVDs not containing them. And depending on the disc, they may work differently.
Menu screen does not appear even when the [illegible] function is selected.	¥Are you using a disc that does not contain menus?
Aspect ratio cannot be changed.	¥You can play 16:9 DVDs in 16:9 WIDE mode, 4:3 LETTER BOX mode, or 4:3 PAN SCAN mode, but 4:3 DVDs can be seen in 4:3 ratio only. Refer to the DVD disc jacket and then select the appropriate function.
Can't receive radio broadcasts.	¥Is the antenna connected properly? ¥If the antenna's input signal is weak, install an external FM antenna in an area with good reception.
The unit is not working. (The power goes out or the screen is hard.) The player is not working properly.	¥Turn off the power and hold the **STOP** button on the main unit for longer than 5 seconds. Using the RESET function will erase all stored settings. Do not use this unless necessary.
The rating level setting is forgotten.	¥While the player is in **"NO DISC"** mode, hold the main unit's **STOP** for longer than 5 seconds. INITIAL appears on the display and all settings will return to the default values. ¥Press the POWER button. **Using the RESET function will erase all stored settings.** **Do not use this unless necessary.**

Press **EXIT** button to exit the setup screen.

Setting the Wallpaper

Setting the Screen Type

Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care centre.

Region	Country
North America	CANADA MEXICO U.S.A
Latin America	ARGENTINE BRAZIL CHILE COLOMBIA ECUADOR EL SALVADOR GUATEMALA JAMAICA PANAMA PERU TRINIDAD & TOBAGO VENEZUELA
Europe	AUSTRIA BELGIUM CZECH DENMARK FINLAND FRANCE GERMANY HUNGARY ITALIA LUXEMBURG NETHERLANDS NORWAY POLAND PORTUGAL RUSSIA SPAIN SWEDEN U.K EIRE SWITZERLAND UZBEKISTAN UKRAINE LITHUANIA LATVIA ESTONIA
Asia Pacific	NEW ZEALAND CHINA HONG KONG INDIA INDONESIA JAPAN MALAYSIA PHILIPPINES SINGAPORE THAILAND TAIWAN VIETNAM
Middle East & Africa	TURKEY SOUTH AFRICA U.A.E

Downloaded From Disc-Player.com Samsung Manuals